

# ADMS-6

## Programming Software

### Installation Manual

The ADMS-6 software (Ver. 1.1 or later) can only be used with FT1XDR/XDE MAIN firmware version “Ver. 13.01” or later and FT1DR/DE MAIN firmware version “Ver. 3.01” or later.

The ADMS-6 programming software provides a convenient and efficient method of loading data to the memory channels, and customizing the set mode items of the FT1XDR/XDE/DR/DE with a Personal Computer. Using a microSD memory card, a personal computer may be used to edit the VFO and memory channel information, and also to configure the Set Menu item settings. With the microSD card, the set mode items and channel programming can then be transferred to the FT1XDR/XDE/DR/DE. Also, the SCU-19 or CT-169 PC connection cable together with the SCU-16 USB serial conversion cable may be used to connect the FT1XDR/XDE/DR/DE to the computer to edit the information.

The programming can be performed comfortably on the large screen of a computer:

- Edit the frequencies, memory names, squelch settings, repeater settings, transmit power, etc. that is related to the VFO, memory channels, preset memory channels, and the HOME channel, etc.
- Edit the Memory bank and bank link setting
- Configure the various set mode menu options on the computer monitor screen
- Use the handy editing functions, such as search, copy, move and paste

Before downloading this software, please read the “Important Notes” carefully. Downloading or installing this software will indicate that you agree with the contents of the “Important Notes”.

#### Important Notes

- Copyrights and all other intellectual property rights for the software, as well as the software manual, are the property of YAESU MUSEN CO., LTD.
- The revision, modification, reverse engineering, and decompiling of this software is prohibited. Redistribution, transfer, and resale of downloaded files are also prohibited.
- Do not resell the software or manuals.
- All responsibility for the use of this software lies with the customer. Yaesu cannot be held responsible in any way for any damages or losses, which may be incurred by the customer as a result of using this software.

To use the ADMS-6 programmer, the software application must first be installed onto the computer. Read this manual thoroughly and install the software.

#### System Requirements

Operating system (OS)

Any one of the following operating system environments:

Microsoft Windows® 10 (32 bit/64 bit)

Microsoft Windows® 8.1 (32 bit/64 bit)

Microsoft Windows® 8 (32 bit/64 bit)

Microsoft Windows® 7 (32 bit/64 bit, Service Pack 1 or later)

\* Microsoft .NET Framework 4.0 or later must be installed on the computer in order to use the software. If it is not installed, install Microsoft .NET Framework 4.0 or later that is provided with the ADMS-6 software.

## How to Confirm the Firmware version

1. Press and hold in the [BAND] key while turning the transceiver ON.
2. When the display lights up fully, press the [BAND] key and check the Version No. displayed.

## Necessary Device

A computer that is able to read/write data from/to the microSD memory card, a computer which is equipped with a USB port\* (USB1.1/USB2.0), or a computer which is equipped with an RS-232C port.

\* When connecting with a USB cable, a SCU-19 PC connection cable or CT-169 PC connection cable together with a SCU-16 USB serial conversion cable are required. When using the SCU-19 or SCU-16, install the designated driver on the computer.

## Installation Procedure

### Driver Installation for the SCU-19 or SCU-16

Before using the SCU-19 PC connection cable or SCU-16 USB serial conversion cable, installation of the driver software for the SCU-19 or SCU-16 is required. Download the driver software for the SCU-19 or SCU-16 in advance.

Download the designated driver software from the Yaesu website (<http://www.yaesu.com/>). Read the installation manual thoroughly and install the driver.

### ADMS-6 Programming Software Installation

1. Download the ADMS-6 programming software (FT1D\_ADMS-6(DG-ID)\_EXP.zip).
2. Unzip the downloaded FT1D\_ADMS-6(DG-ID)\_EXP.zip file.  
In the unzipped "FT1D\_ADMS-6(DG-ID)\_EXP" folder, you will find the "ADMS-6(DG-ID)" and ".NET Framework" folders.
3. If Microsoft .NET Framework 4.0 or later is not installed on the computer, install it before installing the ADMS-6 software.  
Run the installer for Microsoft .NET Framework 4.0 or later, that is provided in the unzipped file, and follow the instructions to install it.
4. Copy the created ADMS-6 folder to the desired directory such as "C:\Program Files".

## Activating the ADMS-6 Programming Software

Double-click "adms.exe" in the copied ADMS-6 folder to run the ADMS-6 programmer.

## Uninstall the ADMS-6 Programming Software

Move the folder of the ADMS-6 folder to the trash box.