

ADMS-12

Instruction Manual

The ADMS-12 software provides convenient editing of the FTM-300DR/DE memory channel frequencies, channel information and alpha tags, using a personal computer. Also the transceiver parameters and the setup menu items may be edited and configured easily from the computer keyboard.

TABLE OF CONTENTS

Introduction	3	• Find Next	17
About this manual	3	• Goto Channel	17
Important Notes	3	• Insert Channel	17
System Requirements	4	• Delete Channel	17
Supported Operating Systems	4	• Clear Channel	17
CPU	4	• Move Up	17
RAM (System Memory)	4	• Move Down	17
HDD (Hard Disk)	4	• Add Frequency Range	18
microSD	4	• Sort	18
Cables	4	Communications (Data communication	
Necessary microSD memory card reader	4	with the FTM-300DR/DE) ...	19
Necessary PC peripheral interfaces	4	Settings	19
The flow of a setup of ADMS-12	5	• Set Mode	19
Trademarks	5	• Tool Bar	20
Setup of the ADMS-12	6	• Status Bar	20
Preparation	6	Window	20
ADMS-12 Programming Software Installation ...	6	Setting the Template Items	21
Uninstalling the ADMS-12	6	Memory	21
SCU-20 USB Driver Software Installation	7	Memories	21
Connect the FTM-300DR/DE and the PC	7	PMS	21
Execute the ADMS-12	8	About the setting items	
Display examples	8	of each memory channels ...	21
First Screen	8	• Receive Frequency/ Transmit Frequency	21
Menu Bar	8	• Offset Frequency	21
TAB Menu Bar	9	• Offset Direction	21
Set mode screen	9	• Operating Mode	22
Communications (Data communication		• DIG/ANALOG	22
with the FTM-300DR/DE) ...	10	• Name	22
Get Data from SD card	10	• Tone Mode	22
Send Data to SD card	11	• CTCSS Frequency	22
Communication port setting	11	• DCS Code	22
Get Data from FTM-300D	12	• User CTCSS	22
Send Data to FTM-300D	12	• RX DG-ID	22
Names and Functions of Menu Bar	13	• TX DG-ID	22
File	13	• Tx Power	22
• New	13	• Step	22
• Open	13	• Narrow	22
• Close	13	• Clock Shift	23
• Save	13	• Comment	23
• Save as	13	VFO A / VFO B	23
• Import	14	About the setting items	
• Export	14	of VFO A / VFO B frequencies ...	23
• Import with FTM-100D/400D format	14	• Receive Frequency	23
• Export with FTM-100D/400D format	14	• Transmit Frequency	23
• Import with FT2D format	14	• Offset Frequency	23
• Export with FT2D format	15	• Offset Direction	24
• Import with FT3D format	15	• AUTO MODE	24
• Export with FT3D format	15	• Operating Mode	24
• Print	15	• DIG/ANALOG	24
• Exit	15	• Tone Mode	24
Edit	16	• CTCSS Frequency	24
• Undo	16	• DCS Code	24
• Cut	16	• User CTCSS	24
• Copy	16	• RX DG-ID	24
• Paste	16	• TX DG-ID	24
• Find	16	• Tx Power	25
		• AUTO STEP	25

• Step	25
• Narrow	25
• Clock Shift	25
• Comment	25
HOME A / HOME B	25
About the setting items	
of HOME A / HOME B channel frequency ...	25
• Receive Frequency / Transmit Frequency	25
• Offset Frequency	26
• Offset Direction	26
• Operating Mode	26
• DIG/ANALOG	26
• Name	26
• Tone Mode	26
• CTCSS Frequency	26
• DCS Code	26
• User CTCSS	26
• RX DG-ID	26
• TX DG-ID	26
• Tx Power	27
• Step	27
• Narrow	27
• Clock Shift	27
• Comment	27
Troubleshooting	28



Introduction

The ADMS-12 programming software uses a Personal Computer to quickly enter and save the FTM-300DR/DE memory channel frequencies and data. Also the many menu settings may be adapted for individual operating preferences. All of the information is saved. The setting data can be imported from the FTM-300DR/DE and edited setting data can be transferred to the FTM-300DR/DE.

- ☐ Edit the frequencies, memory names, squelch settings, repeater settings, transmit power, etc. that is related to the VFO, memory channels, and the HOME channel, etc.
- ☐ Configure the various set mode menu options on the computer monitor screen
- ☐ Use the handy editing functions, such as search, copy, move and paste

About this manual

This manual contains symbols and conventions to call attention to important information.

Symbols	Description
	This icon indicates cautions and alerts the user should be aware of.
	This icon indicates helpful notes, tips and information.

Important Notes

Before downloading this software, please read the “Important Notes” carefully.

- Copyrights and all other intellectual property rights for the software, as well as the software manual, are the property of YAESU MUSEN CO., LTD.
- The revision, modification, reverse engineering, and decompiling of this software is prohibited. Redistribution, transfer, and resale of downloaded files are also prohibited.
- Do not resell the software or manuals.
- All responsibility for the use of this software lies with the customer. Yaesu cannot be held responsible in any way for any damages or losses, which may be incurred by the customer as a result of using this software.

To use the ADMS-12 programmer, the software application must first be installed onto the computer. Read this manual thoroughly and install the software.

System Requirements

Supported Operating Systems

Microsoft® Windows® 10 (32 bit/64 bit)

Microsoft® Windows® 8.1 (32 bit/64 bit)

CPU

The performance of the CPU must satisfy the operating system requirements.

RAM (System Memory)

The capacity of the RAM (system memory) must be more than sufficient to satisfy the operating system requirements.

HDD (Hard Disk)

The capacity of the HDD must be more than sufficient to satisfy the operating system requirements. In addition to the memory space required to run the operating system, about 50 MB or more of additional memory space is required to run the program.

microSD

Commercially available microSD memory card

* When using the following cables, a microSD memory card is not necessary.

Cables

- When using a USB port on the computer: the optional SCU-20 PC connection cable for USB (The SCU-20 is included in the optional SCU-40 WIRES X Connection Cable Kit.)
- When using a COM port connection: the optional CT-163/CT-165 cables
- * When using the SCU-20 cable, be sure to install the designated driver before connecting the cable to the computer.
- * When using a microSD memory card, these cables are not necessary.

Necessary microSD memory card reader

Commercially available microSD memory card reader

* When using a SCU-20, CT-163 or CT-165 cable, memory card reader is not necessary.

Necessary PC peripheral interfaces

USB port (USB 1.1 / USB 2.0) or RS-232C interface (COM port)

* When using a microSD memory card, these ports are not necessary.

The flow of a setup of ADMS-12

The procedure when using ADMS-12 for the first time is as follows.:

ADMS-12 Programming Software Installation (6 page)



SCU-20 USB Driver Software Installation (7 page)



Connect the FTM-300DR/DE and the PC (7 page)



Execute the ADMS-12 (8 page)



To a explanation of operation of the ADMS-12 (8 page)

Trademarks

Microsoft®, Windows®, Windows® 8.1 and Windows® 10 are registered trademarks in the United States and other countries.

Setup of the ADMS-12


The procedure to install the ADMS-12 on a Windows 10[®] (64 bit) computer is shown below for the purpose of explanation.

Preparation


- ☐ Please download the ADMS-12 software from the Yaesu Website for details (<http://www.yaesu.com/>).
- ☐ Download the ADMS-12 Programming Software to the same folder, and extract the downloaded zip file.
- ☐ Start up the computer as an “Administrator” user.

ADMS-12 Programming Software Installation

1. Start up the computer as an “Administrator” user.
2. Double-click the “setup.exe” in the same folder that you have unzip the files.
 - When the “.NET Framework install” dialog box opens, follow the on-screen instructions to install.
3. The dialog box, which is shown right, will open. Click the [Next] button.

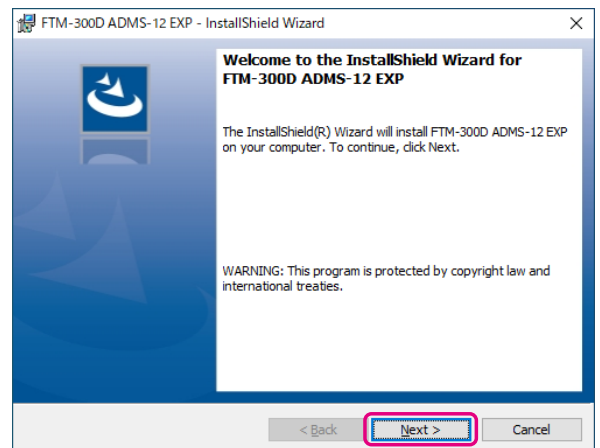

4. Select the folder to install, then click the [Next] button.
5. Click the [Install] button.
 - When the [User Account Control] dialog box opens, click the [Yes] button.
6. When the installation is finished, the dialog box shown right will open. Click the [Finish] button, to complete the installation of the software.

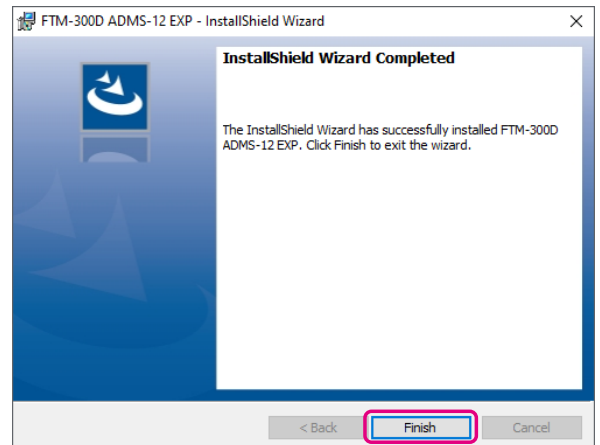

Uninstalling the ADMS-12

The procedure to uninstall the ADMS-12 on a Windows 10[®] (64 bit) computer is shown below for the purpose of explanation.

1. Disconnect the USB Cable from the computer.
2. Click the [Start] button and then click “Settings”.
3. Click “Apps”.
4. Select “FTM-300D ADMS-12 EXP” and then click “Uninstall”.
 - When the “User Account Control” dialog box opens, click the left mouse button on [Yes].
 - The uninstall of the software will start. The uninstall procedure ends with this.

SCU-20 USB Driver Software Installation



Do not connect the transceiver to the computer via the SCU-20 PC Connection Cable until the driver installation process has been completed. Connecting the SCU-20 to the computer before installation has been completed may result in the wrong driver being installed, preventing proper operation.



This procedure is not necessary when exchanging data using a micro SD card.

Before using the SCU-20 PC connection cable, installation of the driver software for the SCU-20 is required. Download the driver software for the SCU-20 in advance.


Download the designated driver software from the Yaesu website (<http://www.yaesu.com/>). Read the installation manual thoroughly and install the driver.

Connect the FTM-300DR/DE and the PC



This procedure is not necessary when exchanging data using a micro SD card.

1. Refer to the figure and connect the SCU-20 PC connection cable.
When using the CT-163 or CT-165 cable, connect the D-SUB connector to the COM port of the PC.

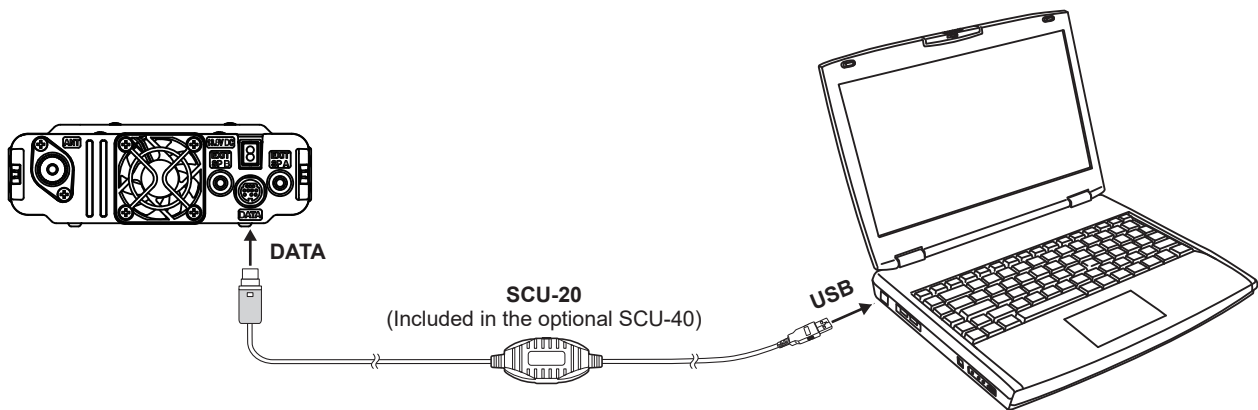

Execute the ADMS-12

Double-click the “FTM-300D ADMS-12 EXP” icon on the desktop of a computer.

Click “Exit” in the “File” menu to close the ADMS-12.




First, use the “**Get Data from FTM-300D**” command (Page 9) or “**Get Data from SD card**” command (Page 10) to upload the setting data of the FTM-300D to the ADMS-12 programmer.



Display examples

First Screen

This is the first screen to be displayed when starting the ADMS-12 software.

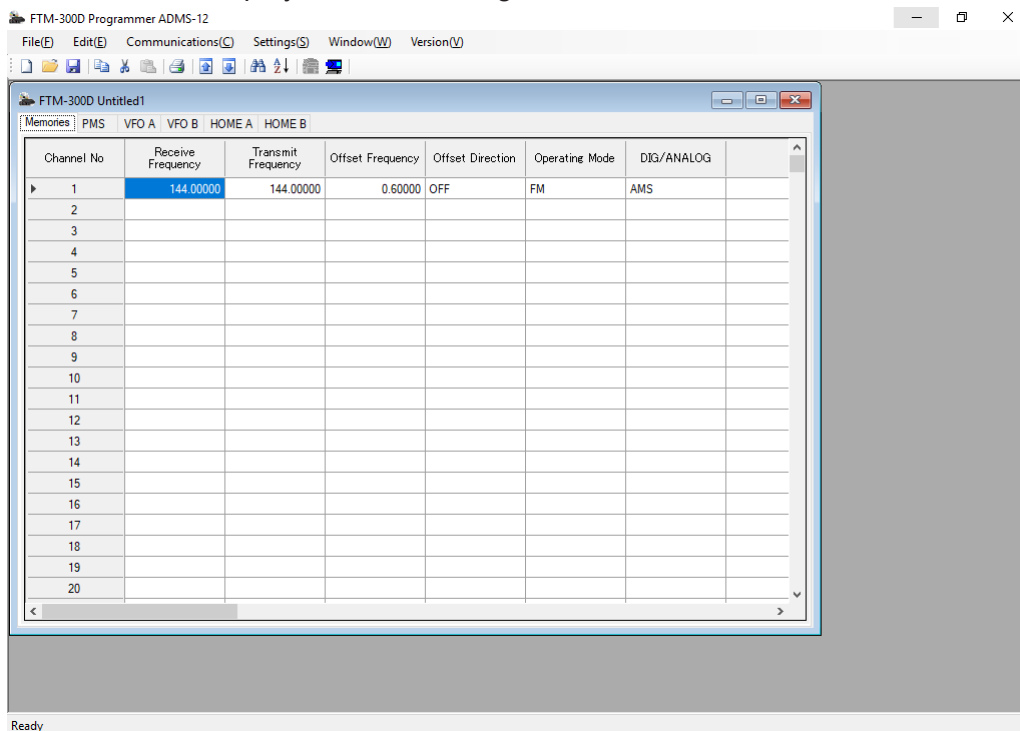


Menu Bar

Click the left mouse button on each Menu in the Menu bar to settings the import/export of the data file, get data form FTM-300DR/DE and send data to FTM-300DR/DE.



For more details, see “Names and Functions of Menu Bar”.

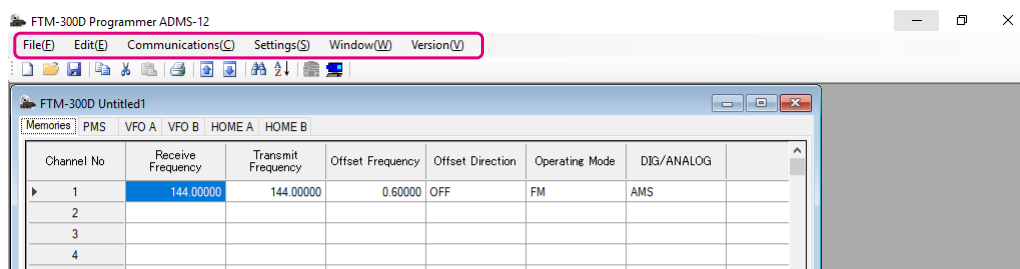


TAB Menu Bar

Click the left mouse button on each TAB in the title bar (Memories, SKIP, PMS, VFO, etc) to display the frequency list of the desired memory channels, VFO and other preset transceiver settings.



For more details, see “Setting the Template Items”.

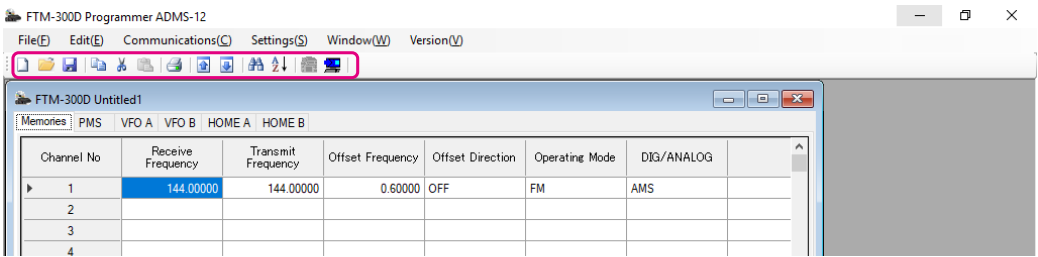


Set mode screen


Basic setting items which are not related to memory channels can be configured from “Set Mode”. Click the left mouse button on "Settings" in the "Settings" menu to open the item "Set Mode" window.



For more details, see “Set Mode ”.

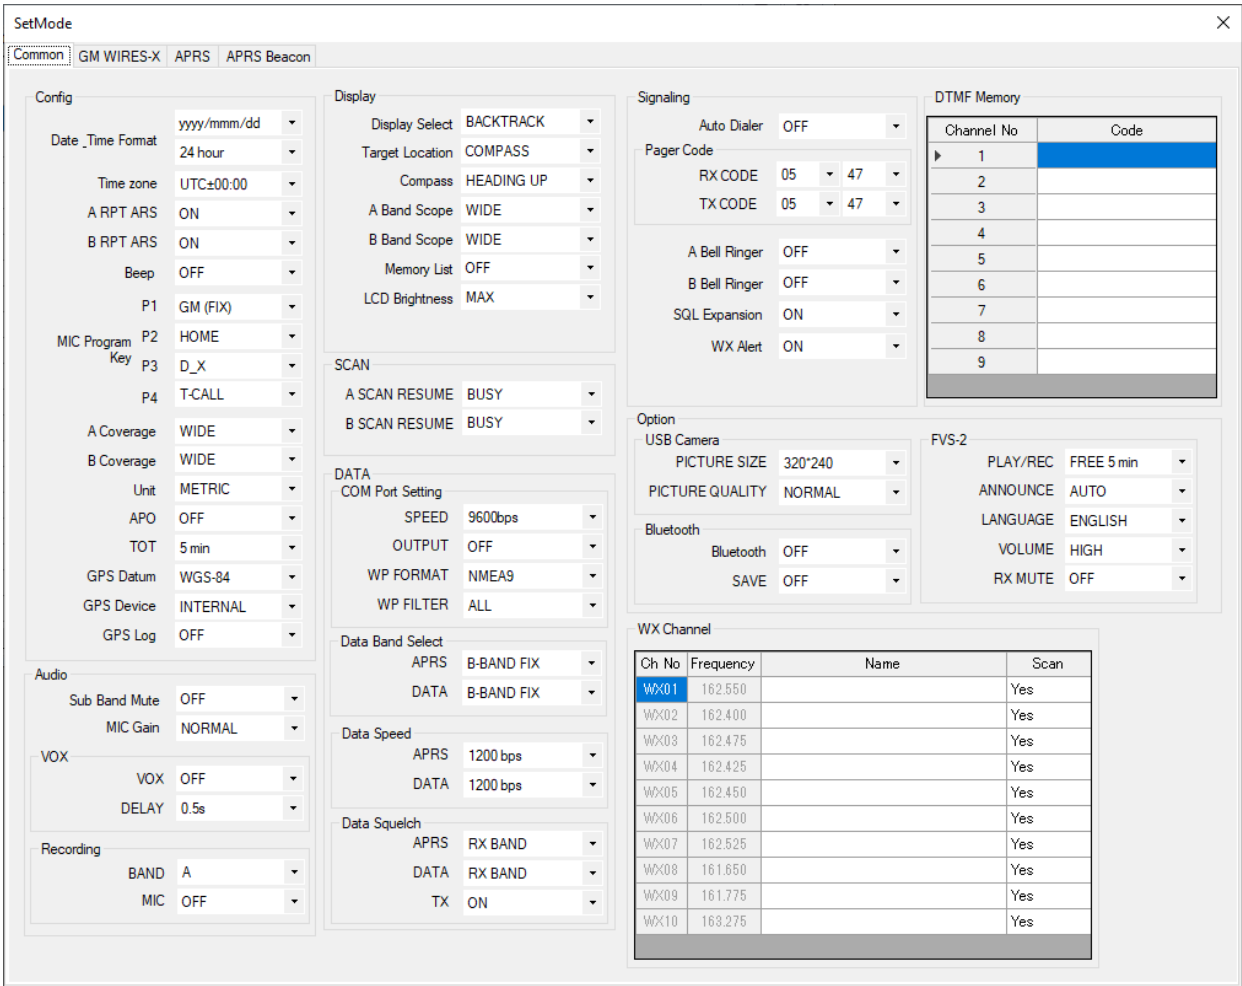

Communications (Data communication with the FTM-300DR/DE)

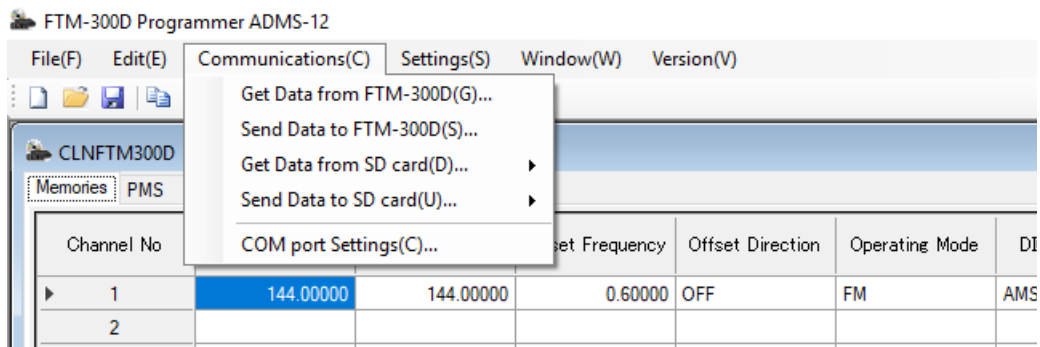

Get Data from SD card

This command imports the settings data from the microSD memory card to the ADMS-12 programmer, and creates a new data file.

1. Insert the microSD memory card with the saved data from FTM-300DR/DE to the computer.
2. Click **"Get Data from SD card"** in the **"Communications"** menu, then select the data area to read from the following.

ALL / MEMORY / SETUP

3. Select the file in the following folder of the microSD card drive according to the selected area.

ALL : "CLNFTM300D.dat" file in the "FTM-300D" folder - **"BACKUP"** folder

MEMORY : "MEMFTM300D.dat" file in the "FTM-300D_MEMORY-CH" folder

SETUP : "SYSFTM300D.dat" file in the "FTM-300D" folder - **"BACKUP"** folder

4. Click [Open].
5. Click [OK].


When the data transfer is complete, the template screen which was imported from the FTM-300DR/DE via the microSD memory card will appear on the ADMS-12 screen.



This template and configuration data may be saved to the computer hard drive, using the "Save" or "Save as" commands in the "File" menu.

● The folder configuration of the micro-SD card

The parameters of each function are stored in the following folders.

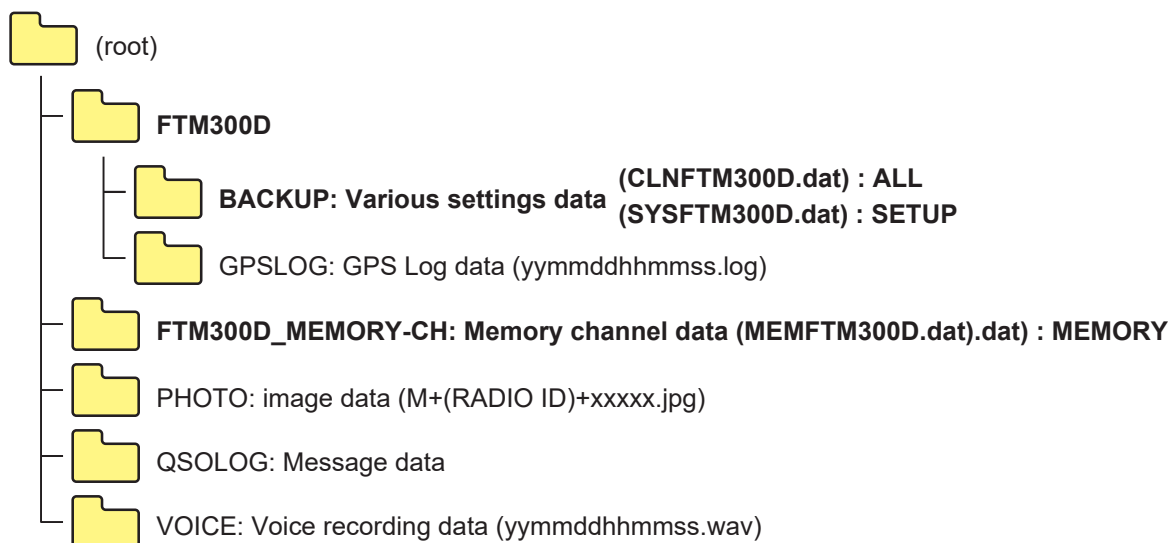

Send Data to SD card

Memories and settings from the ADMS-12 programmer may be transferred to the microSD memory card.

1. Insert a microSD memory card to write data for transfer from PC to FTM-300DR/DE.
2. Click **"Send Data to SD card"** in the **"Communications"** menu, then select the data area to write from the following.

ALL / MEMORY / SETUP

3. Select the file in the following folder of the microSD card drive according to the selected area.

ALL : "CLNFTM300D.dat" file in the "FTM-300D" folder - "BACKUP" folder

MEMORY : "MEMFTM300D.dat" file in the "FTM-300D_MEMORY-CH" folder

SETUP : "SYSFTM300D.dat" file in the "FTM-300D" folder - "BACKUP" folder



Please note that the FTM-300DR/DE cannot read the data from the SD card if you change the save folder or file name.

4. Click **[Save]**.
5. Click **[OK]**.




To transmit previously created data to the microSD memory card, click "Open" in the "File" menu and open the desired file before performing the Send Data to SD card operation above.

Communication port setting




This procedure is not necessary when exchanging data using a micro SD card.

1. Connect the FTM-300DR/DE to a computer (Refer to the "Connect the FTM-300DR/DE and the PC").
2. Execute the ADMS-12 (Refer to the "Execute the ADMS-12").
3. From the menu bar, select **"Communications"** menu, and then click on the **"COM port Settings"**.

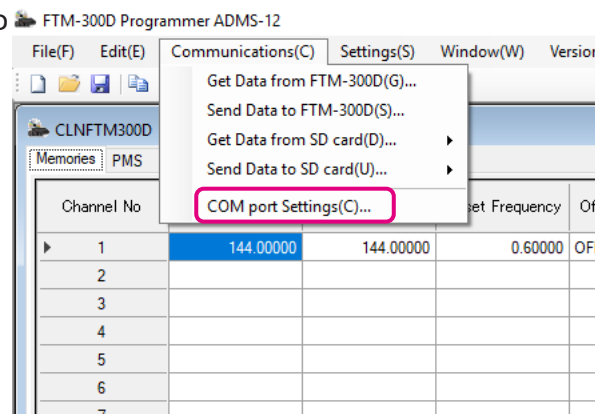

4. Click **[▼]** in the **"Serial Port Selection"** column and click the COM port connected to the FTM-300DR/DE.
5. Click **[Determine]**.

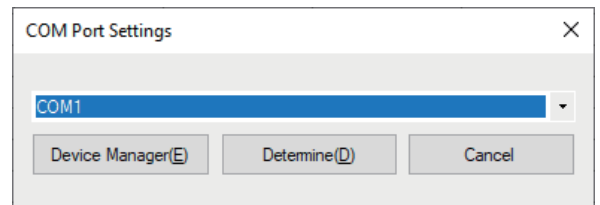

Get Data from FTM-300D

This command transfers the settings data of the FTM-300DR/DE to the ADMS-12 programmer. To communicate with the FTM-300DR/DE and create a new data file. Click the "Get Data from FTM-300D" parameter in the "Communications" menu. The "Get Data From FTM-300D" window will open. Connect the PC connection cable SCU-20 between the FTM-300DR/DE and the computer.

Follow the on-screen instructions to acquire data from the FTM-300DR/DE. When the data transfer is completed, the template screen received from the FTM-300DR/DE appears on the computer display.

The memory channels and configuration menu data may be edited using the ADMS-12 software tools.



This template and configuration data may be saved to the computer hard drive, using the "Save" or "Save as" commands in the "File" menu.

Send Data to FTM-300D

This command downloads the ADMS-12 data from the computer to the FTM-300DR/DE.

Click the "Save Data to FTM-300DR/DE" parameter in the "Communications" menu. The transmission procedure screen will open.



To load a previously created data file to the FTM-300DR/DE, click the "Open" parameter in the "File" menu, and open the desired file before performing the send data operation above.

Connect the PC connection cable SCU-20 between the FTM-300DR/DE and the computer.


Follow the on-screen instructions to transmit data to the FTM-300DR/DE. After the data transmission completes, "Completed" will appear on the computer display, and click the [Close] button. Then, remove the plug of the USB cable and battery charger from the FTM-300DR/DE, after installation of the battery pack, the FTM-300DR/DE will automatically start up in accordance with the set data.



- Never disconnect the programming cable while data transmission is in progress.
 - Pay careful attention to the power cable and the connections to the FTM-300DR/DE and the computer, so as not to lose the power during data reception/transmission.
-

Names and Functions of Menu Bar

File

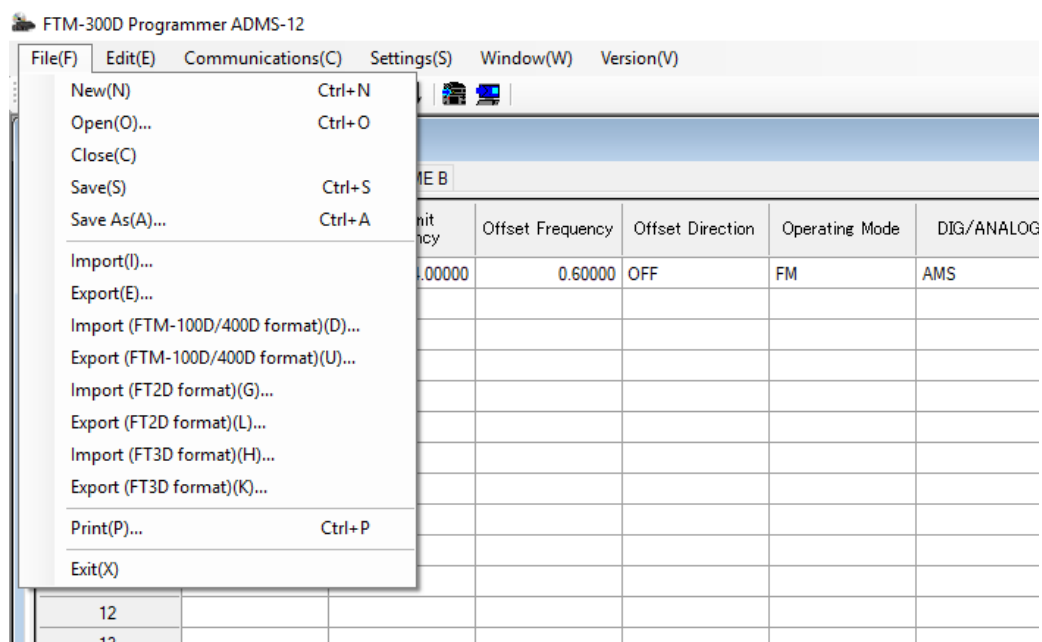

• New

Click the "New" parameter in the "File" menu to open a new configuration file.
Multiple configuration files may be created and opened at the same time.
Standard values are preset for each memory channel, VFO and set mode.

• Open

Click the "Open" parameter in the "File" menu to display the "Open" window.
Select the existing saved template file, and click the "Open" button.

• Close

Close the displayed configuration file by clicking the left mouse button on the "Close" parameter in the "File" menu.

• Save

Click the "Save" configuration in the "File" menu.
To save the present configuration, and overwrite the selected configuration file without changing the file name.

• Save as

Click the "Save As" parameter in the "File" menu.
Specify the file name and destination folder for the selected configuration file and then click the "Save" button to save the file.

• Import

ADMS-12 data files may be created using a spreadsheet such as Microsoft Excel.

To create a data file for the import of data, save the spreadsheet in the “CSV” comma separated file format. A spreadsheet may be easily created by exporting the template data in the “CSV” format using the ADMS-12 “Export” command. After the “CSV” data has been edited the spreadsheet may be imported back into the ADMS-12 Programmer.

A separate import file is needed for each template.

For example, to import the VFO and memory templates; first, click the “VFO” tab to display the VFO template, then import the VFO (CSV) file; next, click the “Memories” tab to display the “Memory” template; then import the Memory (CSV) file.



Do not edit the "Check" line at the right side end of the completed CSV file.

• Export

To export the data file in the “CSV” (Comma Separated Values) format.

Click the “Export” parameter in the “File” menu, On the “Save as” screen displayed, specify the directory and file name and save the file.

Type a file name in the bottom box, then click the [OK] button.

• Import with FTM-100D/400D format

To create a data file for the import of data, save the spreadsheet in the “CSV” comma separated file format (FTM-400XD/D or FTM-100D).

A spreadsheet may be easily created by exporting the template data in the “CSV” format using the ADMS-7 or ADMS-9 “Export” command.

A separate import file is needed for each template. For example, to import the VFO and memory templates; first, click the “VFO” tab to display the VFO template, then import the VFO (CSV) file; next, click the “Memories” tab to display the “Memory” template; then import the Memory (CSV) file.

• Export with FTM-100D/400D format

To export the data file in the “CSV” (Comma Separated Values) format for the ADMS-7 or ADMS-9.

Click the “Export with FTM-100D/400D format” parameter in the “File” menu, On the “Save as” screen displayed, specify the directory and file name and save the file.

Type a file name in the bottom box, then click the [OK] button.

• Import with FT2D format

To create a data file for the import of data, save the spreadsheet in the “CSV” comma separated file format (FT2D or FT1XD/D).

A spreadsheet may be easily created by exporting the template data in the “CSV” format using the ADMS-8 or ADMS-6 “Export” command.

A separate import file is needed for each template. For example, to import the VFO and memory templates; first, click the “VFO” tab to display the VFO template, then import the VFO (CSV) file; next, click the “Memories” tab to display the “Memory” template; then import the Memory (CSV) file.

• Export with FT2D format

To export the data file in the "CSV" (Comma Separated Values) format for the ADMS-8 (FT2D) or ADMS-6 (FT1XD/D).

Click the "Export with FTM-2D format" parameter in the "File" menu, On the "Save as" screen displayed, specify the directory and file name and save the file.

Type a file name in the bottom box, then click the [OK] button.

• Import with FT3D format

To create a data file for the import of data, save the spreadsheet in the "CSV" comma separated file format (FT3D).

A spreadsheet may be easily created by exporting the template data in the "CSV" format using the ADMS-11 "Export" command.

A separate import file is needed for each template. For example, to import the VFO and memory templates; first, click the "VFO" tab to display the VFO template, then import the VFO (CSV) file; next, click the "Memories" tab to display the "Memory" template; then import the Memory (CSV) file.

• Export with FT3D format

To export the data file in the "CSV" (Comma Separated Values) format for the ADMS-11.


Click the "Export with FT3D format" parameter in the "File" menu, On the "Save as" screen displayed, specify the directory and file name and save the file.

Type a file name in the bottom box, then click the [OK] button.

• Print

To print the current template file data to hard copy, click the "Print" parameter in the "File" menu, the "Print" window will open to enable printing. Set the start line and the end line of the data you want to print, and then click the "Printing" button to start printing.


To change the specific printer settings, go to the Printer properties by clicking the the "Printer setup" button.

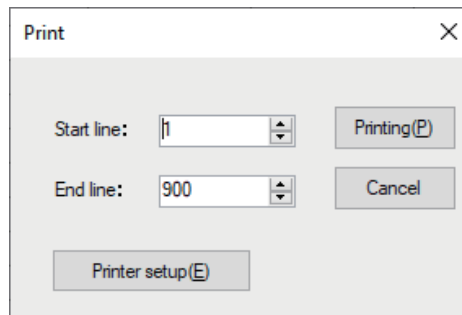

• Exit


To exit the ADMS-12 programmer, click the "Exit" parameter in the "File" menu to close the ADMS-12 software.

If the following pop-up screen appears to confirm saving, follow the on-screen instruction to select the desired button and close the ADMS-12 software.

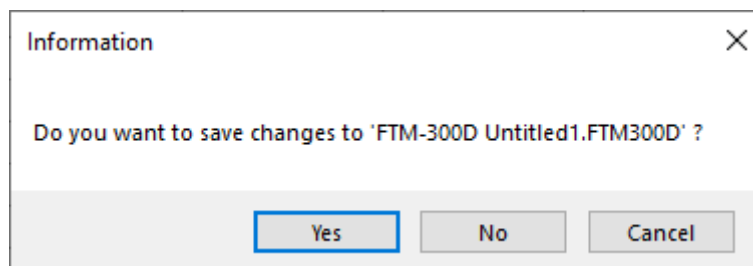

Edit

Click the row to edit, then perform the following each operations.

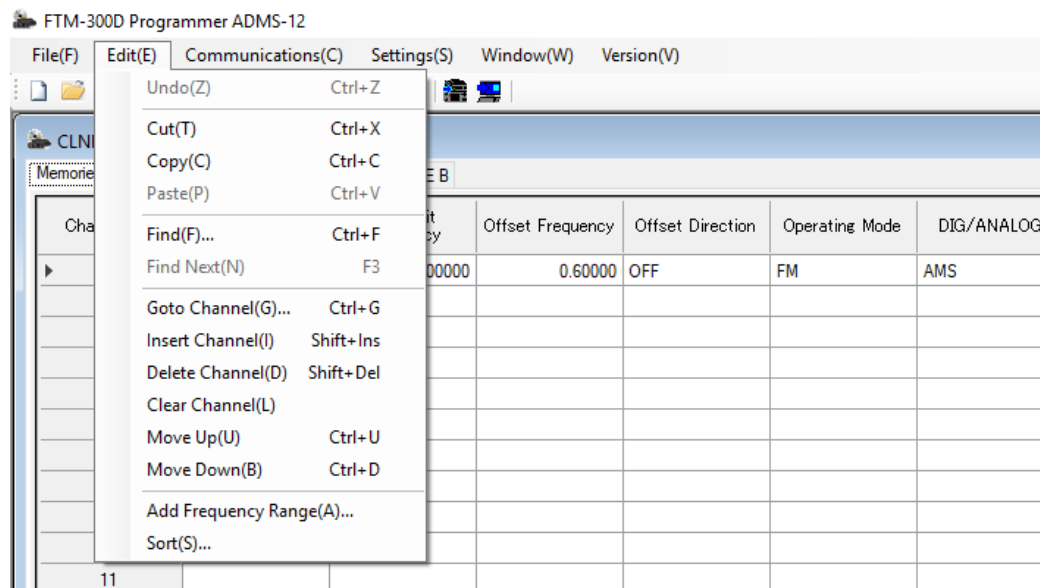

Part of setting items of each row cannot be cut, copy, and paste is not possible.

• Undo

To undo the edited data, click the "Undo" parameter in the "Edit" menu.

• Cut

To cut the data of the selected area, click the "Cut" parameter in the "Edit" menu.

• Copy


To copy the data of the selected area to the clipboard, click the "Copy" parameter in the "Edit" menu.

• Paste

To paste the clipboard data to the selected area, click the "Paste" parameter in the "Edit" menu.

• Find

To find a specified text, click the "Find" parameter in the "Edit" menu. The "Find" window will open.

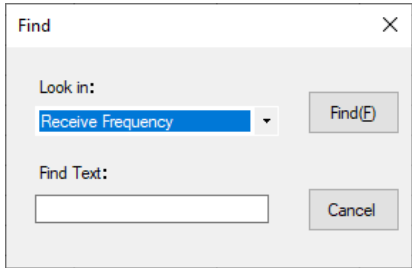


Select the column from the drop down list. Enter the text to search for, and then click the **[Find]** button. The candidate character string found will be highlighted.

• Find Next

Click the "Find Next" parameter in the "Edit" menu to move to the next candidate character string.

• Goto Channel

Move the cursor to the desired channel, click the "Goto Channel" parameter in the "Edit" menu to open the screen where you can specify the channel you want to move to.

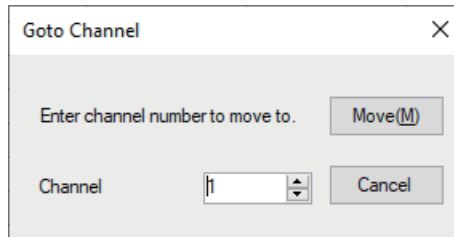

Enter the channel number you wish to find, and then click the [OK] button.

• Insert Channel

To insert channel data, click the "Insert Channel" parameter in the "Edit" menu to create a blank new channel data row under a current cursor. If there are any higher channel numbers with channel data, the higher channel numbers will be displayed after the newly inserted channel number so that the channels are displayed in the ascending order.

Attempting to insert a new channel when highest channel contains data causes the data registered to highest channel to be deleted. "Continue?" will appear. If you agree, click the [OK] button.

• Delete Channel

To delete the specified range of channel data, click the "Delete Channel" parameter in the "Edit" menu. The channels that were displayed after the deleted channels will shift up accordingly.

• Clear Channel

To clear the current channel data, click the "Clear Channel" parameter in the "Edit" menu. The channels that were displayed after the deleted channels will not shift up and the blank channels will remain.

• Move Up

To move the current channel data up one row, click the "Move Up" parameter in the "Edit" menu.

If other channel data already exists where the channel data moves, the existing channel will be overwritten.

• Move Down


To move the current channel data down one row, click the "Move Down" parameter in the "Edit" menu, the currently selected channel data moves downward one row.

If other channel data already exists where the channel data moves, the existing channel will be overwritten.

• Add Frequency Range

New channels may be created in designated frequency steps from the starting frequency by clicking the left mouse button on the "Add Frequency Range" parameter in the "Edit" menu. The "Add Frequency Range" window will open.

A specified number of memory channels may be created, beginning from the starting frequency in the specified frequency steps.

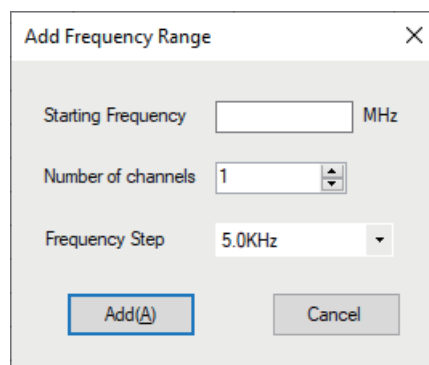

Starting Frequency: Enter the lower frequency

Number of Channel: Enter the number of channels

Frequency Step: Enter the desire frequency step


Click the [OK] button to create the additional specified memory channels.



* The 8.33 kHz step is available only when receiving on the Air band (108-136.995 MHz).

• Sort

Click the "Sort" parameter in the "Edit" menu, the "Sort" window will open.

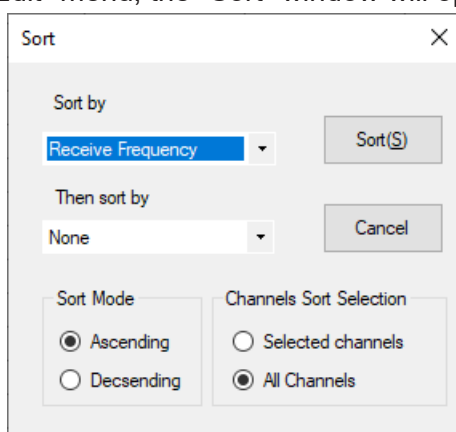

Sort by:

Select the first parameter for sorting items such as the order of frequencies.

Then sort by:

Select the second parameter for sorting.

Sort Mode:

Set to sort in ascending or descending order.


Channels Sort Selection:

Set whether to sort the selected channel column(s) or to sort all channel columns.

Click the [Sort] button to initiate the sorting according to the above instructions.

The data may be restored to the previous order by using the "Undo" command.

Communications (Data communication with the FTM-300DR/DE)

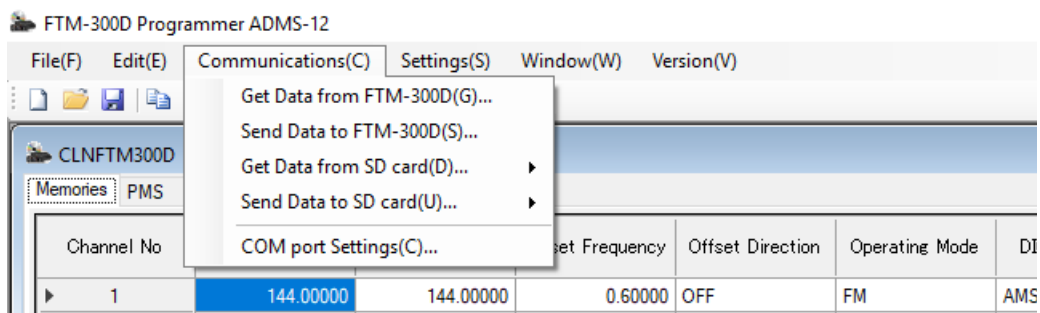

For details on the Communications Menu, refer to “Communications (Data communication with the FTM-300DR/DE)” (Page 10).


Settings

• Set Mode

From the set mode menu, you can customize the various functions of the FTM-300DR/DE according to your preferences.


The ADMS-12 software displays the set mode menu in an easy-to-understand manner where you can change and save the setting values.

Click the "Settings" parameter in the "Settings" menu to open the "SetMode" window.

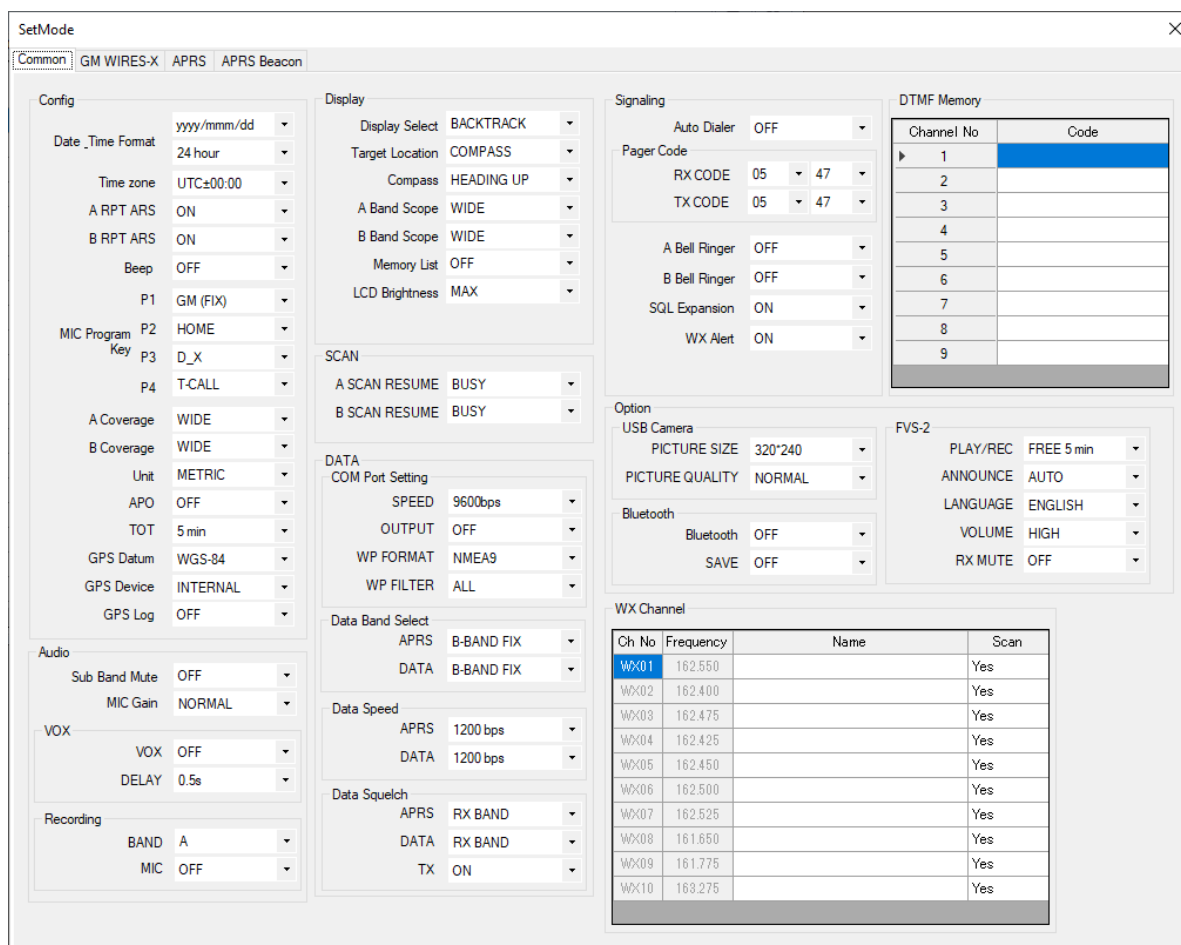

To change the setting of each item in the window, click the "▼" icon to show the dropdown settings list, and then click the desired selection in the list.

Example:

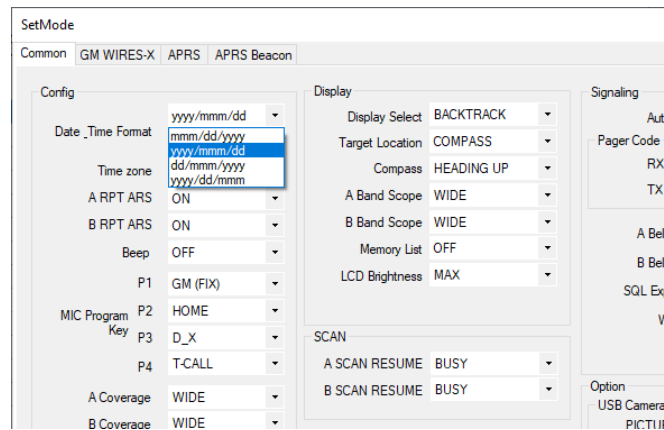

Refer to the "FTM-300DR/DE Operating Manual" for the details of each function.

When you have completed editing the settings of the Menu Setting window.

- **Tool Bar**

Click the "Toolbar" parameter in the "Setting" menu to display or hide the Toolbar.


A check mark appears next to the "Toolbar" parameter when the Toolbar is displayed.



- **Status Bar**

The “Status Bar” describes the action to be executed by the selected menu item, or the depressed toolbar button, and keyboard latch state.

A check mark appears next to the "Status Bar" parameter when the Status Bar is displayed.



Window


This menu sets the operating window parameters of the ADMS-12 programmer.

- Click the “Tile (up and down)” parameter in the “Window” menu to display multiple template files by dividing the window into two lists (upper and lower parts).
- Click the “Tile (up and down)” parameter in the “Window” menu to display multiple template files by dividing the window into two lists (right and left parts).
- Click the "Cascade" parameter in the "Window" menu to display multiple templates in cascade format.

Setting the Template Items

Memory

Use this page to edit the Memory channels data, Skip Memory channels, or PMS (Programmable Memory Scan) memory channels.

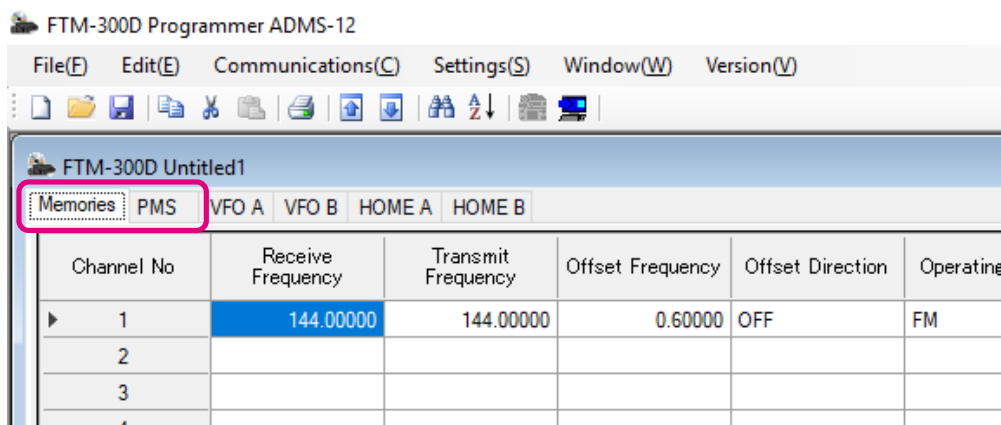

Memories

Enter and edit the frequencies you normally use to the memory channels. Up to 999 channels can be registered.

PMS

Edit the upper and lower limit frequencies for performing PMS (Programmable Memory Scan). Enter the lower limit frequency for the L channel and the upper limit frequency for the corresponding U channel. Up to 50 pairs (100 channels) of PMS can be registered.

About the setting items of each memory channels

• Receive Frequency/ Transmit Frequency

Enter the desired receive/transmit frequency. When the frequency entry is complete, use the → key to move the cursor to the right and subsequently configure the additional detail settings for the channel. To enter the transmit frequency for the next channel, press the ENTER or ↓ key. The receive and transmit frequencies can be set separately.

• Offset Frequency

When a transmit frequency is not entered, transmission will be performed at a frequency obtained by adding/subtracting the offset frequency to/from the receive frequency.

• Offset Direction

Set the frequency shift direction.

- OFF: The transmit frequency is not shifted.
- RPT: The transmit frequency is shifted to the minus offset.
- +RPT: The transmit frequency is shifted to the plus offset.
- /+ The transmit frequency is not shifted.

• Operating Mode

Select the operating mode for receive channel.

FM: The selected frequency band is set to FM mode.

AM: The selected frequency band is set to AM mode.

• DIG/ANALOG

The AMS, V/D mode (DN), the Voice FR mode (VW) and the ANALOG mode (FM/AM mode) are selectable.



When the Setup Menu [TX/RX] → [2 DIGITAL] → [5 DIGITAL VW] is set to “ON”, the Voice FR mode (VW) can be selected.

• Name

Enter the desired memory name (up to 16 digits).

• Tone Mode

This item selects the Audio Squelch Code type.

• CTCSS Frequency

This item selects the Tone Frequency of the Tone Squelch.

• DCS Code

Select the DCS code when DCS is set.

• User CTCSS

Select the idle line frequency to remove signals such as idle line signals used by private railways and control signals of MCA radio system.

• RX DG-ID

Select the receiving DG-ID number.

• TX DG-ID

Select the transmitting DG-ID number

• Tx Power

This item selects the TX Power.

• Step

Sets the channel step for receiving channels.

• Narrow

By ticking the checkbox of this item, switches to the Narrow FM mode.

• Clock Shift

When an internal spurious signal occurs due to the microcomputer clock, turn this setting on (tick the checkbox). This may improve the situation.

Usually, this item is set to "OFF" (un-tick the checkbox).


• Comment

Comments may be added to the registered memory channels. Up to 255 letters can be used. This function is useful in organizing the memory channels by, for example, applying a category name to each channel.

These comments are not transferred to the FTM-300DR/DE.

VFO A / VFO B

Edit the VFO A / VFO B configurations for each band on this page template.

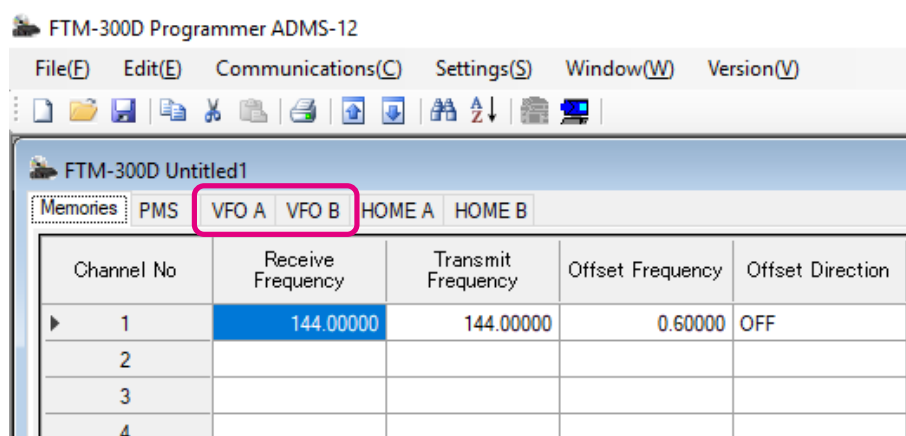

VFO A / VFOB

About the setting items of VFO A / VFO B frequencies

• Receive Frequency

Enter the VFO frequencies for each band. The FTM-300DR/DE default Frequencies are pre-entered into the ADMS-12 standard template.

A frequency that is out of the transceiver's range cannot be entered. When the error pop-up window is opened, enter the correct frequency.

• Transmit Frequency

The transmit frequency display is grayed out, and it will be set automatically, in accordance with the receive, and the offset frequencies.

• Offset Frequency

When a transmit frequency is not entered, transmission will be performed at a frequency obtained by adding/subtracting the offset frequency to/from the receive frequency.

• Offset Direction

Set the frequency shift direction.

OFF: The transmit frequency is not shifted.

-RPT: The transmit frequency is shifted to the minus offset.

+RPT: The transmit frequency is shifted to the plus offset.

• AUTO MODE

When tick the check box of AUTO MODE, the receive mode (FM mode or AM mode) is automatically selected. Un-ticking the checkbox enables selecting the operating mode.

• Operating Mode

Select the operating mode for receive channel.

FM: The selected frequency band is set to FM mode.

AM: The selected frequency band is set to AM mode.

• DIG/ANALOG

The AMS, V/D mode (DN), the Voice FR mode (VW) and the ANALOG mode (FM/AM mode) are selectable.



When the Setup Menu [TX/RX] → [2 DIGITAL] → [5 DIGITAL VW] is set to "ON", the Voice FR mode (VW) can be selected.

• Tone Mode

This item selects the Audio Squelch Code type.

• CTCSS Frequency

This item selects the Tone Frequency of the Tone Squelch.

• DCS Code

Select the DCS code when DCS is set.

• User CTCSS

Select the idle line frequency to remove signals such as idle line signals used by private railways and control signals of MCA radio system.

• RX DG-ID

Select the receiving DG-ID number.

• TX DG-ID

Select the transmitting DG-ID number.

- **Tx Power**

This item selects the TX Power.

- **AUTO STEP**

By ticking the checkbox of this item, the frequency step is set to “AUTO” automatically provides a suitable frequency step (frequency variation by rotating the **DIAL** knob) according to the frequency band. By Turning off the checkbox, the step setting become selectable.

- **Step**

Sets the channel step for receiving channels.

- **Narrow**

By ticking the checkbox of this item, switches to the Narrow FM mode.

- **Clock Shift**

When an internal spurious signal occurs due to the microcomputer clock, turn this setting on (tick the checkbox). This may improve the situation.


Usually, this item is set to “**OFF**” (un-tick the checkbox).

- **Comment**

Comments may be added to the edited VFO bands. Up to 255 letters can be used. This function is useful in organizing the VFO bands by, for example, applying a category name to each VFO bands. These comments are not transferred to the FTM-300DR/DE.

HOME A / HOME B

Edit the Home Channel configurations:

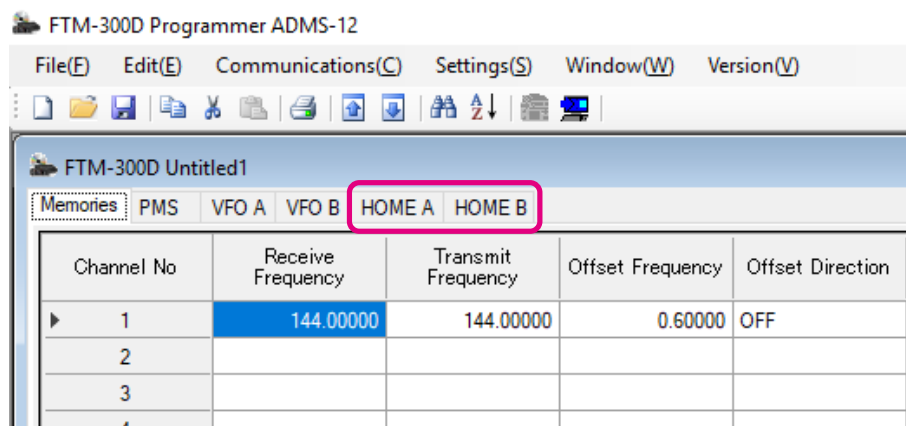

About the setting items of HOME A / HOME B channel frequency

- **Receive Frequency / Transmit Frequency**

Enter any desired changes into Home Channel frequency. The FTM-300DR/DE default Frequencies are pre-entered into the ADMS-12 standard template.

A frequency that is out of the transceiver's range cannot be entered. When the error pop-up window is opened, enter the correct frequency. Inputting the receive frequency, the transmit frequency is automatically set.

• Offset Frequency

When a transmit frequency is not entered, transmission will be performed at a frequency obtained by adding/subtracting the offset frequency to/from the receive frequency.

• Offset Direction

Set the frequency shift direction.

OFF: The transmit frequency is not shifted.

-RPT: The transmit frequency is shifted to the minus offset.

+RPT: The transmit frequency is shifted to the plus offset.

-/+ : The transmit frequency is not shifted.

• Operating Mode

Select the operating mode for receive channel.

FM: The selected frequency band is set to FM mode.

AM: The selected frequency band is set to AM mode.

• DIG/ANALOG

The AMS, V/D mode (DN), the Voice FR mode (VW) and the ANALOG mode (FM/AM mode) are selectable.



When the Setup Menu [TX/RX] → [2 DIGITAL] → [5 DIGITAL VW] is set to "ON", the Voice FR mode (VW) can be selected.

• Name

Enter the desired memory name (up to 16 digits).

• Tone Mode

This item selects the Audio Squelch Code type.

• CTCSS Frequency

This item selects the Tone Frequency of the Tone Squelch.

• DCS Code

Select the DCS code when DCS is set.

• User CTCSS

Select the idle line frequency to remove signals such as idle line signals used by private railways and control signals of MCA radio system.

• RX DG-ID

Select the receiving DG-ID number.

• TX DG-ID

Select the transmitting DG-ID number

- **Tx Power**

This item selects the TX Power.

- **Step**

Sets the channel step for receiving channels. Normally, when a frequency is entered, the optimal channel step will be automatically set according to the frequency.

- **Narrow**

By ticking the checkbox of this item, switches to the Narrow FM mode. The degree of modulation becomes half the normal level.

- **Clock Shift**

When an internal spurious signal occurs due to the microcomputer clock, turn this setting on (tick the checkbox). This may improve the situation.

Usually, this item is set to "OFF" (un-tick the checkbox).

- **Comment**

Comments may be added to the edited HOME channels. Up to 255 letters can be used. This function is useful in organizing the HOME channels by, for example, applying a category name to each channel.

These comments are not transferred to the FTM-300DR/DE.

Troubleshooting

The FTM-300DR/DE cannot receive or transmit data to the computer. The Data transfer does not start.

- Verify that the programming cable is correctly connected to the FTM-300DR/DE data port and to the Computer.

Connect correctly.

- Is the computer COM Port setting correct?

Set the COM Port correctly.

- Are you operating in a different order from the clicked the “Get Data from FTM-300D” in the “Communications” menu and displayed procedure?
- Follow the on-screen instructions.
- Are you operating in a different order from the clicked the “Send Data to FTM-300D” in the “Communications” menu and displayed procedure?

Follow the on-screen instructions.

The data transmission has stopped before completion

- Disconnecting the connection cable or poor contact of the connection cable.

Confirm the cable connection and try again.

The data import/export is not successful

- Adjust the number of the rows of CSV file.
- Use the designated letter for the character string.
- When importing and exporting channels such as memory channels and VFO channels, make sure that the template files are consistent. If the template files are different, an error will occur and the data import and export will not be successful.



Copyright 2020
YAESU MUSEN CO., LTD.
All rights reserved.

No portion of this manual may be
reproduced without the permission of
YAESU MUSEN CO., LTD.

YAESU MUSEN CO., LTD.

Tennozu Parkside Building
2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

YAESU USA

6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

YAESU UK

Unit 12, Sun Valley Business Park, Winnall Close
Winchester, Hampshire, SO23 0LB, U.K.