

ADMS-6

(Ver. 1.1 or later)
DG-ID and DP-ID Feature Compatible

Operation Manual

The ADMS-6 software provides convenient editing of the FT1XDR/XDE/DR/DE memory channel frequencies, channel information and alpha tags, using a personal computer. Also the transceiver parameters and the setup menu items may be edited and configured easily from the computer keyboard.

Attention !

The ADMS-6 software (Ver. 1.1 or later) can only be used with FT1XDR/XDE MAIN firmware version "Ver. 13.01" or later and FT1DR/DE MAIN firmware version "Ver. 3.01" or later.

TABLE OF CONTENTS

Introduction.....	4	Tool Bar	21
System Requirements	4	Status Bar	21
Operating system (OS)	4	Window	22
CPU	4	Tile(up and down)	22
RAM (system memory)	4	Tile(right and left)	22
HDD (Hard Disk)	4	Cascade.....	22
Necessary PC peripheral interfaces	4	Setting the Template Items.....	23
microSD	4	Memories	23
Cables.....	4	Priority CH	23
Display examples.....	5	Receive Frequency / Transmit Frequency.....	23
Before using the ADMS-6		Offset Frequency	23
FT1XDR/XDE/DR/DE Programmer ...	7	Offset Direction	23
Using the ADMS-6 software	7	Operating MODE	24
Functions	8	Name	24
File	8	Tone Mode.....	24
New	8	CTCSS Frequency.....	24
Open	8	DCS Code.....	24
Exit	8	DCS Polarity	24
Save.....	8	User CTCSS	24
Save As.....	8	TX Power	24
Import / Import with FT1D format	9	Skip.....	24
Export / Export with FT1D format.....	9	Step	25
Print.....	10	Memory Mask	25
End.....	10	ATT	25
Edit.....	10	S-Meter SQL.....	25
Undo	10	Bell.....	25
Cut	10	Vibrator	25
Copy.....	10	Half DEV	25
Paste.....	10	Clock Shift.....	25
Find	11	BANK 1 to BANK 24	25
Find Next.....	11	Comment	25
Goto Channel.....	11	SKIP	26
Insert Channel.....	11	PMS	27
Delete Channel	12	VFO A / VFO B	27
Clear Channel	12	Receive Frequency.....	28
Move Up.....	12	Transmit Frequency.....	28
Move Down	12	Operating MODE	29
Add Frequency Range	12	Tone Mode.....	29
Sort	13	Comment	29
Communications	14	HOME	29
Get Data from FT1D	14	Receive Frequency / Transmit Frequency.....	30
Send Data to FT1D	15	Operating MODE	30
Get Data From SD Card	15	Comment	30
Send Data to SD Card	16	SW Banks	31
COM port Settings	17	BANK 1 to BANK 24	31
Settings.....	17	Comment	31
Settings	17	Marine Banks	32
Common	17	BANK 1 to BANK 24	32
GM_WIRES-X.....	18	Comment	32
APRS GPS	19	Weather	33
APRS Beacon.....	20	BANK 1 to BANK 24	33
Memory.....	21	Comment	33

Troubleshooting34
 The FT1XDR/XDE/DR/DE cannot receive
 or transmit data to the computer ...34
 The Data transfer does not start.34
 The data transmission has stopped
 before completion34
 The data import/export is not successful.34
Contact YAESU Technical Support34

Introduction

The ADMS-6 programming software uses a Personal Computer to quickly enter and save the FT1X-DR/XDE/DR/DE memory channel frequencies and data. Also the many menu settings may be adapted for individual operating preferences. All of the information is saved. The setting data can be imported from the FT1XDR/XDE/DR/DE and edited setting data can be transferred to the FT1XDR/XDE/DR/DE. Furthermore, by using the ADMS-6 software.

System Requirements

In order to use this program, a personal computer (PC) with one of the following Windows operating systems, and a serial data connection cable are required.

Operating system (OS)

Any one of the following operating system environments

Microsoft Windows® 10 (32 bit/64 bit)

Microsoft Windows® 8.1 (32 bit/64 bit)

Microsoft Windows® 8 (32 bit/64 bit)

Microsoft Windows® 7 (32 bit/64 bit, Service Pack 1 or later)

CPU

The performance of the CPU must be able to satisfy the operating system requirements.

RAM (system memory)

The capacity of the RAM (system memory) must be more than sufficient to satisfy the operating system requirements.

HDD (Hard Disk)

The capacity of the HDD must be more than sufficient to satisfy the operating system requirements. In addition to the memory space required to run the operating system, about 50 MB or more of additional memory space is required to run the program.

Necessary PC peripheral interfaces

USB port (USB 1.1 / USB 2.0) or RS-232C interface (COM port)

microSD

Commercially available microSD memory card


* When using the following cables, a microSD memory card is not necessary.

Cables


- When using a USB port on the computer: the optional SCU-19 PC connection cable for USB
- When using a COM port connection: the optional SCU-16 and CT-169 cables
- * When using the SCU-19 or SCU-16 cable, be sure to install the designated driver to the PC before connecting the cable to the computer.
- * When using a microSD memory card, these cables are not necessary.

Display examples


This is the first screen to be displayed when starting the ADMS-6 software.

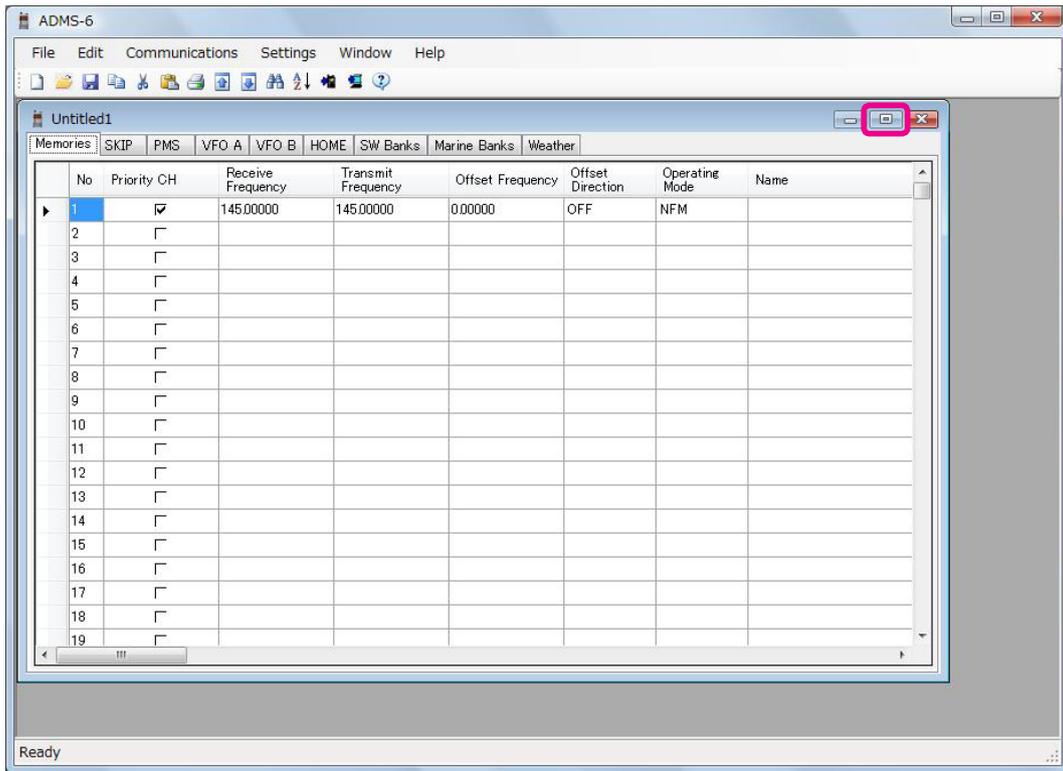


Click the left mouse button on the  icon of the Title bar to enlarge a window. The display window is shown in Full screen mode.

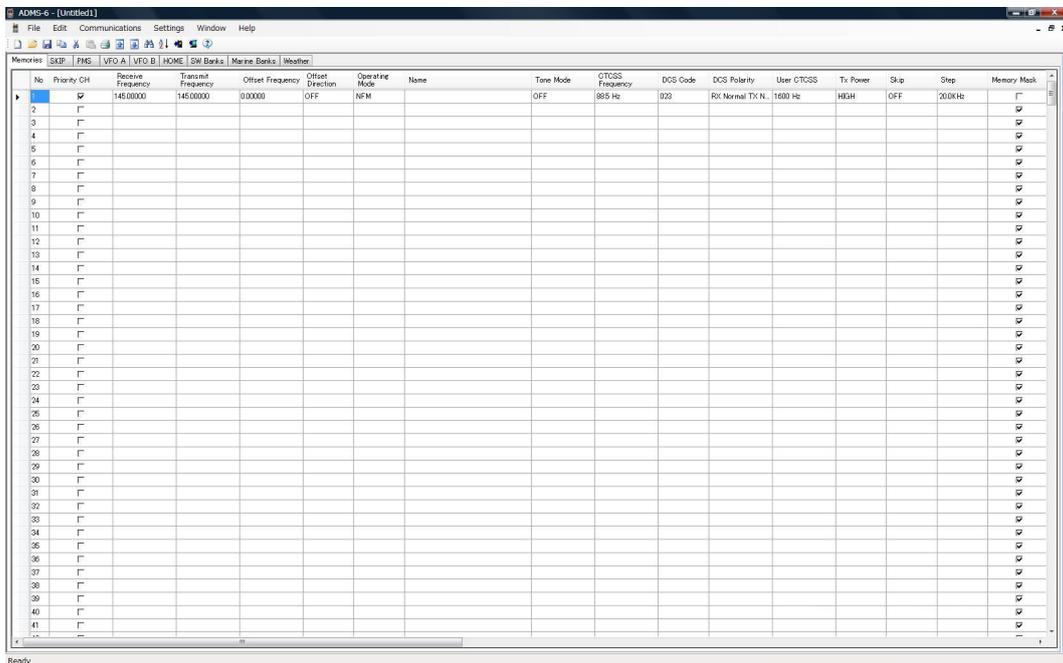

Click the left mouse button on each TAB in the title bar (PMS, VFO A, etc) to display the frequency list of the desired memory channels, VFO and other preset transceiver settings.

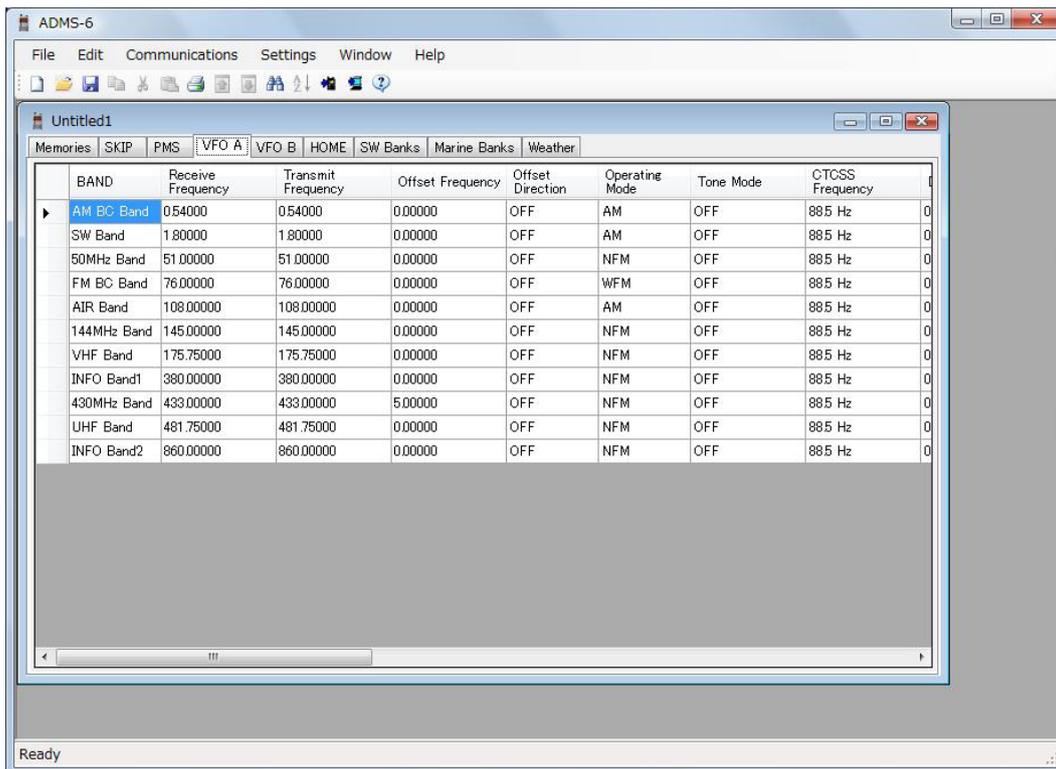

Basic setting items which are not related to memory channels can be configured from "SetMode". Click the left mouse button on each item of the "Settings" in the "Settings" menu to open the item "SetMode" window.

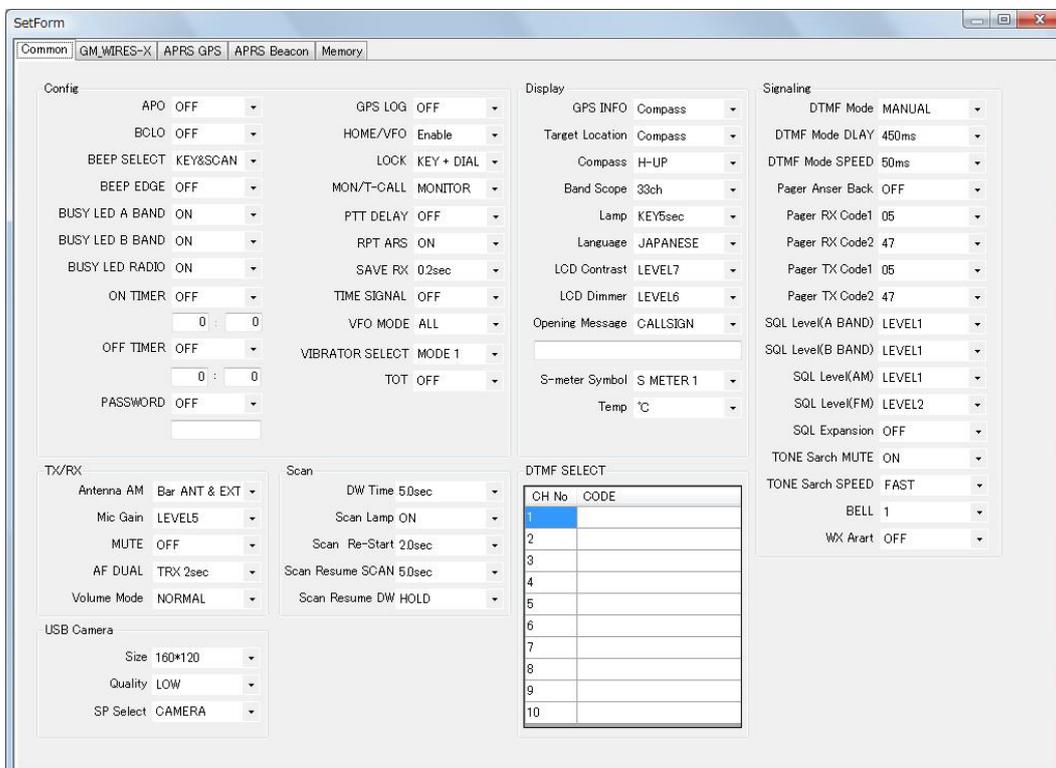


Before using the ADMS-6 FT1XDR/XDE/DR/DE Programmer

When using the optional SCU-19 PC USB connection cable, or the SCU-16 USB serial adapter cable, be sure to install the designated driver to the PC before connecting either cable to the computer.

Select the communication port that is connected to the FT1XDR/XDE/DR/DE.

Click the left mouse button on the "COM port Settings" item in the "Communications" menu to open the "COM Port Settings" window.

Click the left mouse button on the "▼" button to display the COM Port List, and then click the left mouse button on the communication port that is connected to the FT1XDR/XDE/DR/DE.

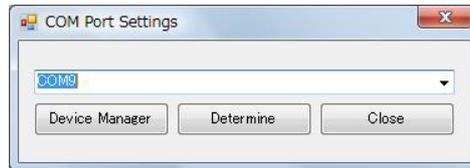

When using the SCU-19 or SCU-16, open the Device Manager on the computer and then click the port (COM or LPT) to select the port number (COM**) displayed as Prolific USB-to-Serial Comm Port (COM**).

If Prolific USB-to-Serial Comm Port is not displayed in the COM port list, the driver for SCU-19 or SCU-16 is not installed correctly. Install the device driver correctly to the computer.

After correctly installing the SCU-19 or SCU-16 drivers, if the COM Port number is not correct and the popup message "The port COMxx does not exist" is displayed click OK. Open [Device Manager] and find the correct COM Port number. Then choose the correct COM Port number from the list, or type the correct COM Port number. Then click the [Determine] button to save the setting.

Using the ADMS-6 software

To enable the FT1XDR/XDE/DR/DE clone mode for use with the ADMS-6 software, use the following procedure:

1. Turn the transceiver **OFF**.
2. Press and hold the [**F**] key and turn the transceiver **ON**.
3. To acquire data from the FT1XDR/XDE/DR/DE, press the [**BAND**] key. To transfer data to the FT1XDR/XDE/DR/DE, press the [**DX**] key.

Note: First, use the "Get Data from FT1D" command (Page 14) to upload the setting data of the FT1XDR/XDE/DR/DE to the ADMS-6 programmer.

Functions

File

New

Creates a new configuration file.

Click the left mouse button on the "New" parameter in the "File" menu to open a new configuration file.

Multiple configuration files may be created and opened at the same time.

Standard values are preset for each memory channel, VFO and set mode.

Open

Opens a previously saved configuration file.

Click the left mouse button on the "Open" parameter in the "File" menu to display the "Open" window. Select the existing saved template file, and click the "Open" button.

Exit

Close the displayed template file by clicking the left mouse button on the "Close" parameter in the "File" menu.

If the present configuration has not been saved, you will be asked to confirm whether or not you wish to save it.

Save

To save the present configuration, and overwrite the selected configuration file without changing the file name, click the left mouse button on the "Save" parameter in the "File" menu.

Save As

To save the configuration file with a new name, click the left mouse button on the "Save As" parameter in the "File" menu. Specify the file name and destination folder for the selected configuration file and then click the "Save" button to save the file.

Import / Import with FT1D format


ADMS-6 data files may be created using a spreadsheet such as Microsoft Excel.

To create a data file for the import of data, save the spreadsheet in the "CSV" comma separated file format. A spreadsheet may be easily created by exporting the template data in the "CSV" format using the ADMS-6 "Export" command. After the "CSV" data has been edited the spreadsheet may be imported back into the ADMS-6 Programmer. (See the "Export" command instructions below for details).

A separate import file is needed for each template.

For example, to import the VFO and memory templates; first, click the "VFO" tab to display the VFO template, then import the VFO (CSV) file; next, click the "Memories" tab to display the "Memory" template; then import the Memory (CSV) file.


Do not edit the "Check" line at the right side end of the completed CSV file.

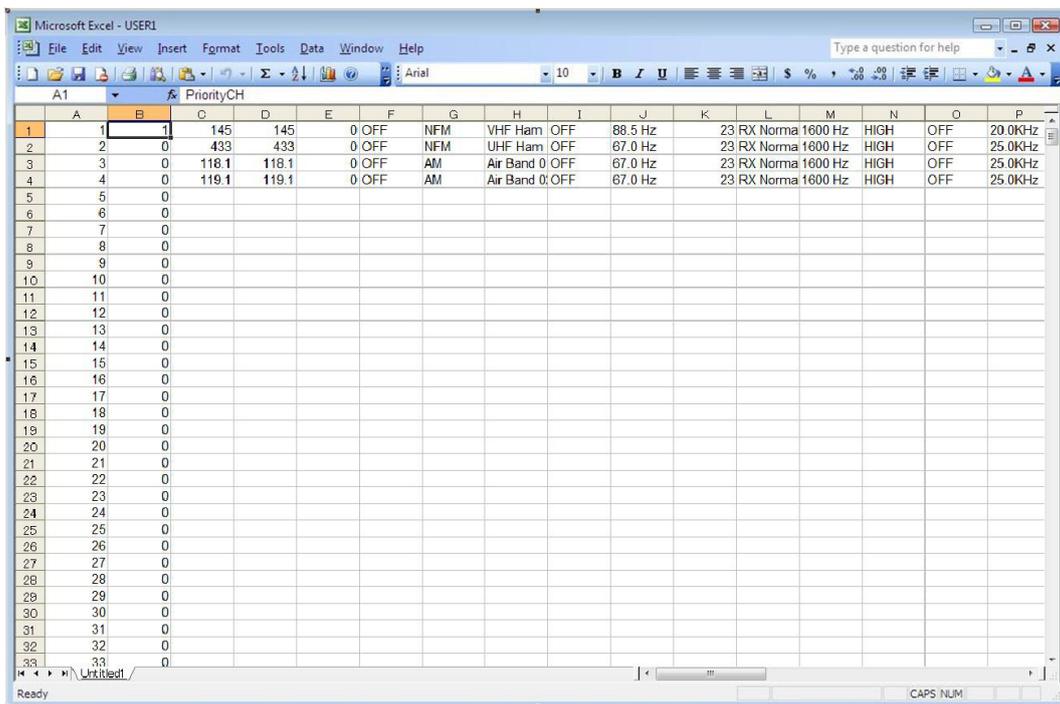

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	
1	1	1	145	145	0	OFF	NFM	VHF Ham	OFF	88.5 Hz	23	RX Norma	1600 Hz	HIGH	OFF	20.0KHz	
2	2	0	433	433	0	OFF	NFM	UHF Ham	OFF	67.0 Hz	23	RX Norma	1600 Hz	HIGH	OFF	25.0KHz	
3	3	0	118.1	118.1	0	OFF	AM	Air Band	0	OFF	67.0 Hz	23	RX Norma	1600 Hz	HIGH	OFF	25.0KHz
4	4	0	119.1	119.1	0	OFF	AM	Air Band	0	OFF	67.0 Hz	23	RX Norma	1600 Hz	HIGH	OFF	25.0KHz
5	5	0															
6	6	0															
7	7	0															
8	8	0															
9	9	0															
10	10	0															
11	11	0															
12	12	0															
13	13	0															
14	14	0															
15	15	0															
16	16	0															
17	17	0															
18	18	0															
19	19	0															
20	20	0															
21	21	0															
22	22	0															
23	23	0															
24	24	0															
25	25	0															
26	26	0															
27	27	0															
28	28	0															
29	29	0															
30	30	0															
31	31	0															
32	32	0															
33	33	0															


Export / Export with FT1D format

To export the data file in the "CSV" (Comma Separated Values) format, click the left mouse button on the "Export" parameter in the "File" menu. On the "Save as" screen displayed, specify the directory and file name and save the file.

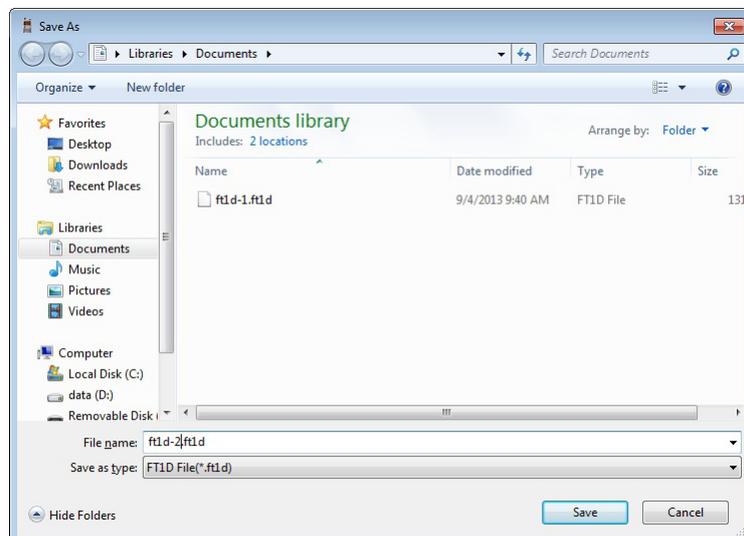

Print


To print the current template file data to hard copy, click the left mouse button on the "Print" parameter in the "File" menu, the "Print" window will open to enable printing. Set the start line and the end line of the data you want to print, and then click the left mouse button on the "Printing" button to start printing.

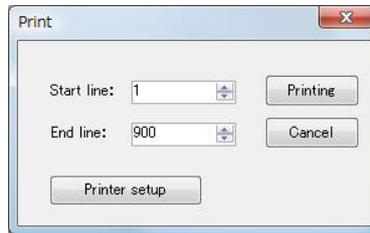

To change the specific printer settings, go to the Printer properties by clicking the left mouse button on the "Printer setup" button.

End

To exit the ADMS-6 programmer, click the left mouse button on the "End" parameter in the "File" menu to close the ADMS-6 software. If the following pop-up screen appears to confirm saving, follow the on-screen instruction to select the desired button and close the ADMS-6 software.

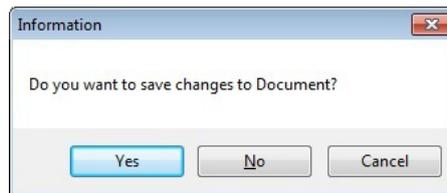

Edit

Undo

To undo the edited data, click the left mouse button on the "Undo" parameter in the "Edit" menu.

Cut

To cut the data of the selected area, click the left mouse button on the "Cut" parameter in the "Edit" menu.

Copy


To copy the data of the selected area to the clipboard, click the left mouse button on the "Copy" parameter in the "Edit" menu.

Paste

To paste the clipboard data to the selected area, click the left mouse button on the "Paste" parameter in the "Edit" menu.

Find

To find a specified text, click the left mouse button on the "Find" parameter in the "Edit" menu. The "Find" window will open.

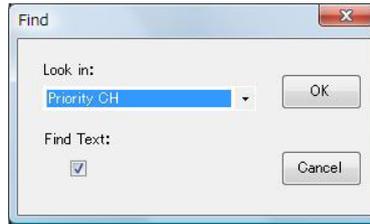

Select the column from the dropdown list. Enter the text to search for, and then click the left mouse button on the [OK] button. The candidate character string found will be highlighted.

Find Next

Click the left mouse button on the "Find Next" parameter in the "Edit" menu to move to the next candidate character string

Goto Channel

Move the cursor to the desired channel, click the left mouse button on the "Goto Channel" parameter in the "Edit" menu to open the screen where you can specify the channel you want to move to.



Enter the channel number you wish to find, and then click the left mouse button on the [OK] button.

Insert Channel

To insert channel data, click the left mouse button on the "Insert Channel" parameter in the "Edit" menu to create a blank new channel data row under a current cursor. If there are any higher channel numbers with channel data, the higher channel numbers will be displayed after the newly inserted channel number so that the channels are displayed in the ascending order.

Attempting to insert a new channel when channel No. 900 contains data causes the data registered to channel No. 900 to be deleted. The confirmation message will appear. If you accept the deletion, click the [OK] button. The channel insert operation will be performed and the data registered to channel No. 900 will be deleted.



Delete Channel

To delete the specified range of channel data, click the left mouse button on the "Delete Channel" parameter in the "Edit" menu. The channels that were displayed after the deleted channels will shift up accordingly.

Clear Channel

To clear the current channel data, click the left mouse button on the "Clear Channel" parameter in the "Edit" menu. The channels that were displayed after the deleted channels will not shift up and the blank channels will remain.

Move Up


To move the current channel data up one row, click the left mouse button on the "Move Up" parameter in the "Edit" menu. If other channel data already exists where the channel data moves, the existing channel will be overwritten.

Move Down

To move the current channel data down one row, click the left mouse button on the "Move Down" parameter in the "Edit" menu, the currently selected channel data moves downward one row. If other channel data already exists where the channel data moves, the existing channel will be overwritten.

Add Frequency Range

New channels may be created in designated frequency steps from the starting frequency by clicking the left mouse button on the "Add Frequency Range" parameter in the "Edit" menu. The "Add Frequency Range" window will open. A specified number of memory channels may be created, beginning from the starting frequency in the specified frequency steps.

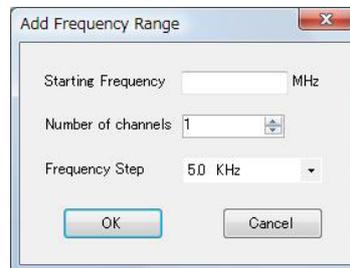


- Starting Frequency
Enter the lower frequency
- Number of Channel
Enter the number of channels
- Frequency Step
Enter the desire frequency step

Click the left mouse button on the **[OK]** button to create the additional specified memory channels.

* The 8.33 kHz step is available only when receiving on the Air band (108-136.99166 MHz).

Sort

Click the left mouse button on the "Sort" parameter in the "Edit" menu, the "Sort" window will open.

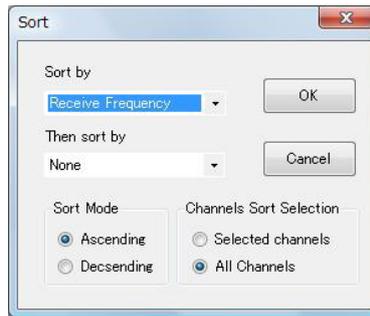

- Sort by:
Select the first parameter for sorting items such as the order of frequencies.
- Then sort by:
Select the second parameter for sorting.
- Sort Mode:
Set to sort in ascending or descending order.
- Channels Sort Selection:
Set whether to sort the selected channel column(s) or to sort all channel columns.

Click the left mouse button on the **[OK]** button to initiate the sorting according to the above instructions.

The data may be restored to the previous order by using the "Undo" command.


Communications

Get Data from FT1D

This command transfers the settings data of the FT1XDR/XDE/DR/DE to the ADMS-6 programmer.


Note: First, use the "Get Data from FT1D" command to upload the setting data of the FT1XDR/XDE/DR/DE to the ADMS-6 programmer.

To communicate with the FT1XDR/XDE/DR/DE and create a new data file, click the left mouse button on the "Get Data from FT1D" parameter in the "Communications" menu. The "Get Data From FT1D" window will open.

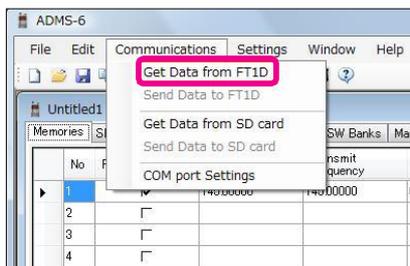

Connect the supplied SCU-19 or SCU-16 programming cable between the FT1XDR/XDE/DR/DE and the Personal Computer.

Follow the on-screen instructions to acquire data from the FT1XDR/XDE/DR/DE. When the data transfer is completed, the template screen received from the FT1XDR/XDE/DR/DE appears on the computer display. The memory channels and configuration menu data may be edited using the ADMS-6 software tools.

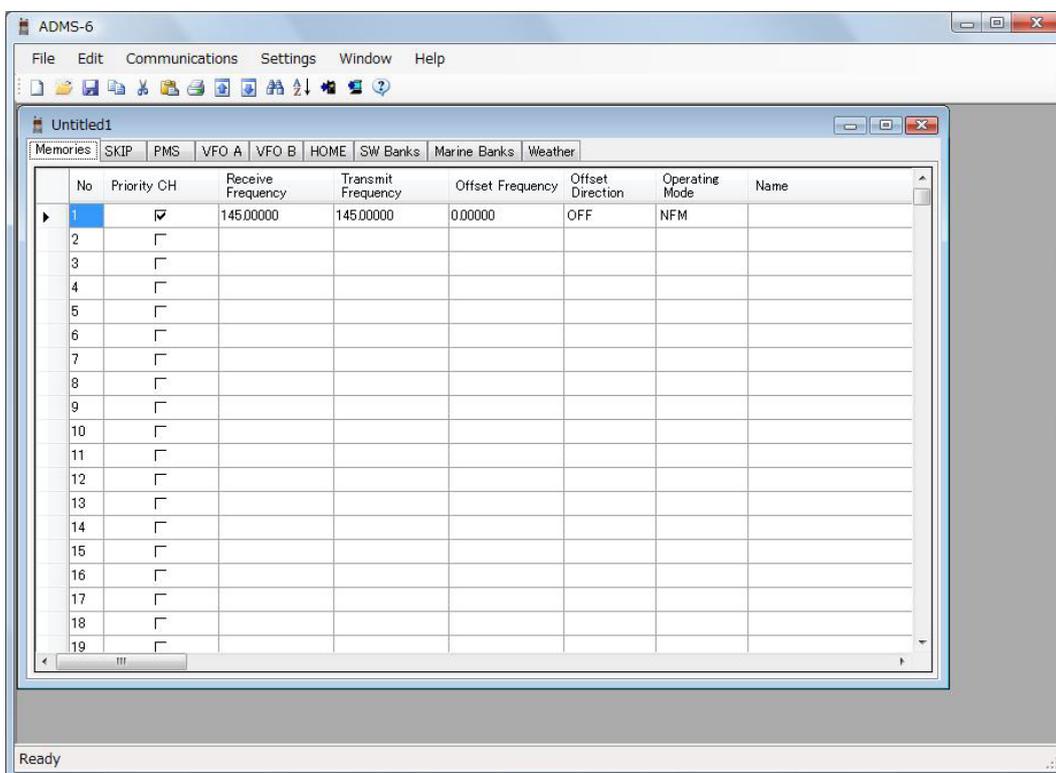


This template and configuration data may be saved to the computer hard drive, using the "Save" or "Save as" commands in the "File" menu.

Send Data to FT1D

This command downloads the ADMS-6 data from the computer to the FT1XDR/XDE/DR/DE.

Click the left mouse button on the "Save Data to FT1D" parameter in the "Communications" menu. The transmission procedure screen will open.

To load a previously created data file to the FT1XDR/XDE/DR/DE, click the "Open" parameter in the "File" menu, and open the desired file before performing the send data operation above.

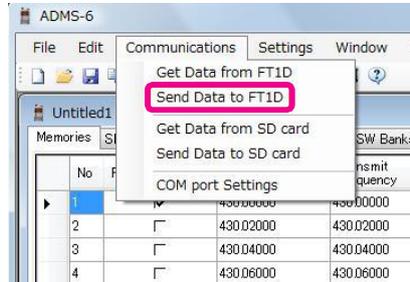

Connect the supplied SCU-19 or SCU-16 programming cable between the FT1XDR/XDE/DR/DE and the Personnel Computer.


Follow the on-screen instructions to transmit data to the FT1XDR/XDE/DR/DE. After the data transmission completes, the FT1XDR/XDE/DR/DE will automatically start up in accordance with the set data.

- * Never disconnect SCU-19 or SCU-16 programming cable while data transmission is in progress.
- * Pay careful attention to the power cable and the connections to the FT1XDR/XDE/DR/DE and the computer, so as not to lose the power during data reception/transmission.

Get Data From SD Card

This command imports the settings data from the microSD memory card to the ADMS-6 programmer, and creates a new data file.

Click the left mouse button on the "Get Data from SD card" parameter in the "Communications" menu, the data import procedure screen will open.

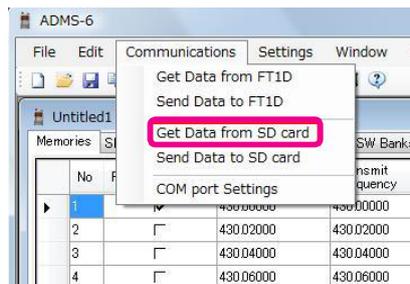


Insert the microSD memory card with the saved data from FT1XDR/XDE/DR/DE to the computer.

Select the data to import from the microSD memory card.

Follow the on-screen instructions to select the desired file and then click "Open" to import the data file.

When the data transfer is complete, the template screen which was imported from the FT1XDR/XDE/DR/DE via the microSD memory card will appear on the computer screen.

This data may be edited using the computer.

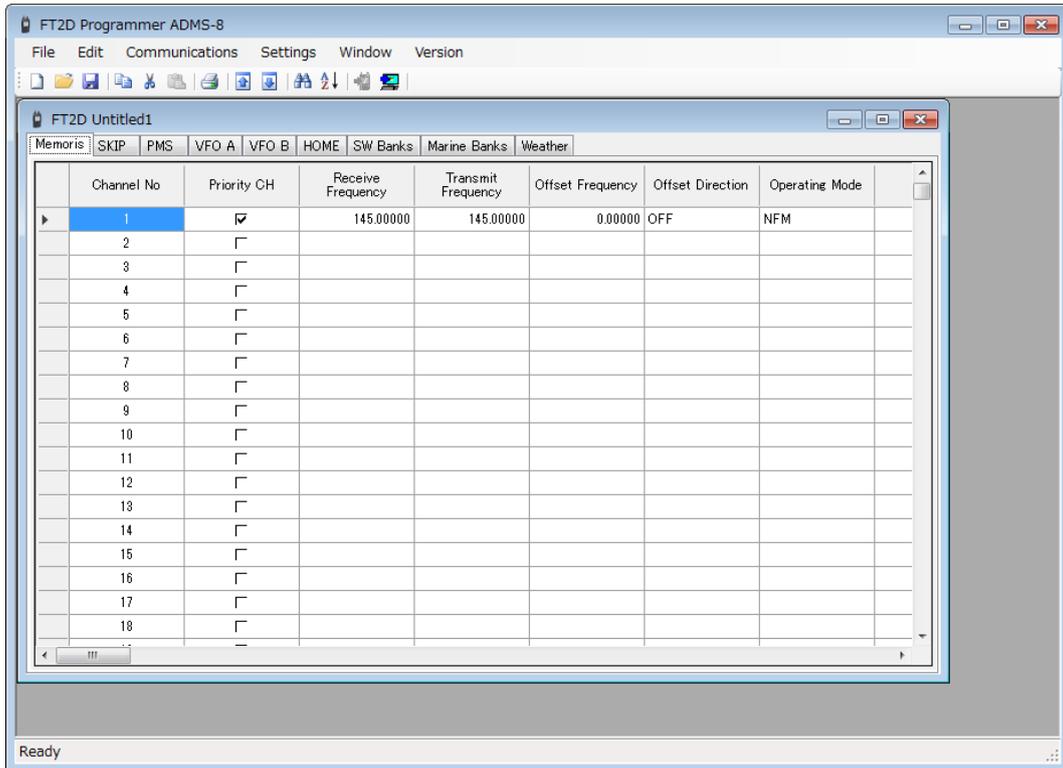


The template data may be stored to the computer files, using the "Save" or "Save as" commands in the "File" menu.

Send Data to SD Card


Memories and settings from the ADMS-6 programmer may be transferred to the microSD memory card. Click on "Send Data to SD card" in the "Communications" menu to open the data transmission procedure screen.

To transmit previously created data to the microSD memory card, click "Open" in the "File" menu and open the desired file before performing the Send Data to SD card operation above.

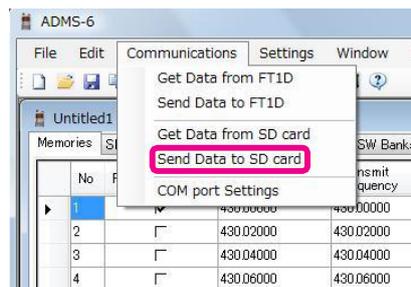

Make sure that the microSD memory card to which you want to save the setting data is inserted into the computer SD card slot.

Follow the instructions on the screen to copy the data to the SD card. When the data filetransfer to the SD card is complete, a notice "Complete" is displayed on the computer screen.

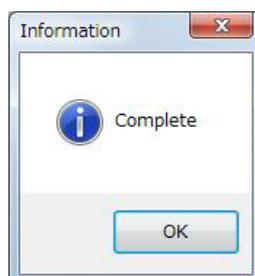

COM port Settings

Select the COM port that is connected to the FT1XDR/XDE/DR/DE.



For details about “COM port Setting”, see “Before using the ADMS-6 FT1XDR/XDE/DR/DE Programmer” (Page 7).

Settings

Settings


From the set mode menu, you can customize the various functions of the FT1XDR/XDE/DR/DE according to your preferences. The ADMS-6 software displays the set mode menu in an easy-to-understand manner where you can change and save the setting values.

Click the left mouse button on the "Settings" parameter in the "Settings" menu to open the "SetMode" window.

The “SetMode” window template consists of five setting screens: “Common”, “GM_WIRES-X”, “APRS GPS”, “APRS Beacon”, and “Memory”. The screens may be switched by clicking the corresponding file tab.

Common

On the “Common” screen, you can configure basic settings for the FT1XDR/XDE/DR/DE.

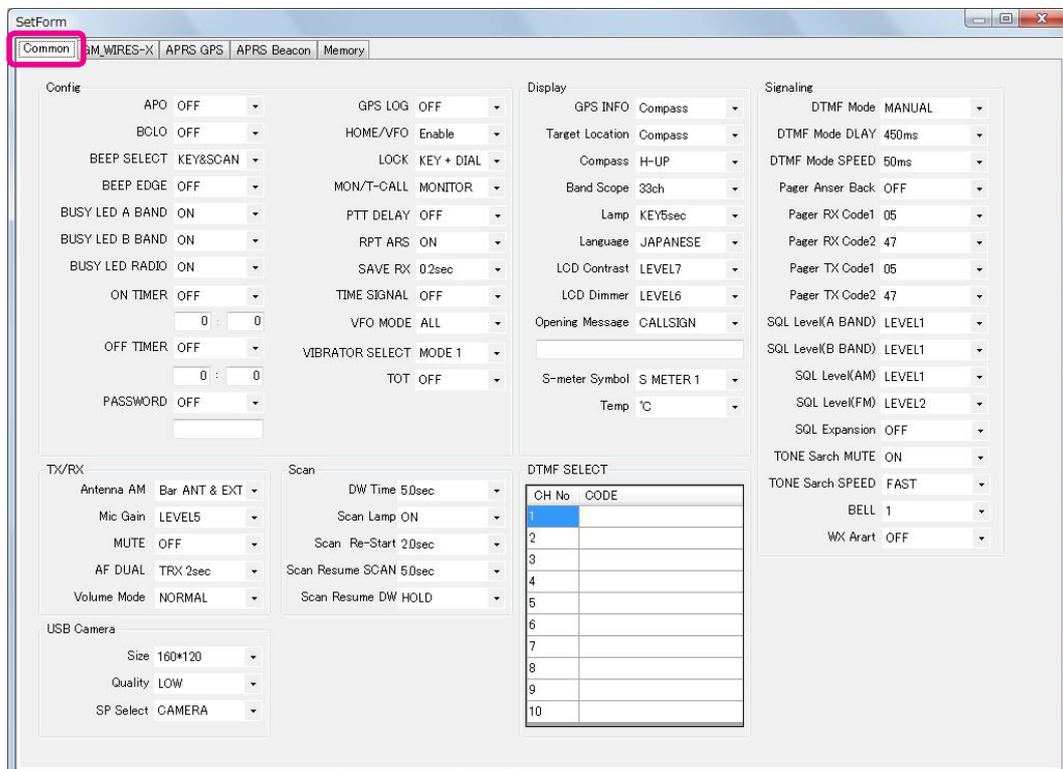

To change the setting of each item in the window, click the left mouse button on the "▼" icon to show the dropdown settings list, and then click the desired selection in the list.

Example:




Enter the "DTMF SELECT" Codes by placing the cursor in the appropriate box and typing the desired data.

Refer to the "FT1XDR/XDE/DR/DE Operating Manual" for the details of each function.

GM_WIRES-X

The settings related to the GM and WIRES-X functions of the FT1XDR/XDE/DR/DE may be configured with the programming software.

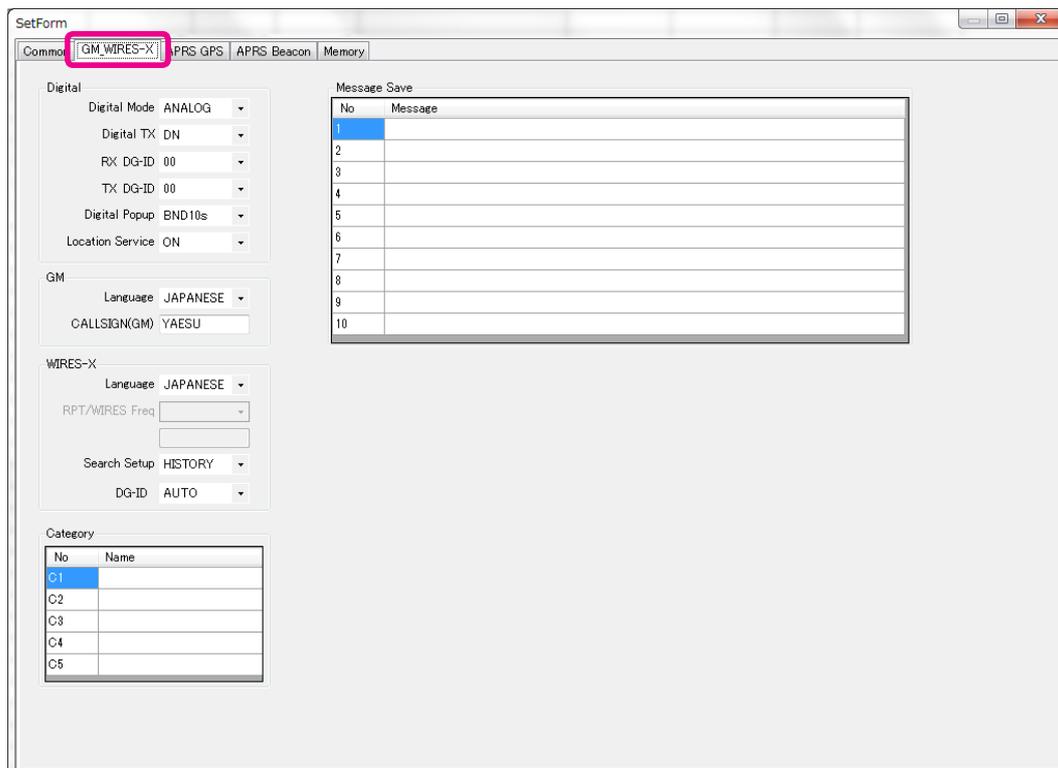


To change the setting of each item in the window, click the left mouse button on the "▼" icon to show the dropdown settings list, and then click the desired selection from the list. Enter the "CATEGORY" and "MESSAGE SAVE" information by placing the cursor in the appropriate box and typing the desired data.

Refer to the "FT1XDR/XDE/DR/DE Operating Manual" for the details of each function.

APRS GPS

The settings related to the APRS and GPS functions of the FT1XDR/XDE/DR/DE may be configured with the programming software.

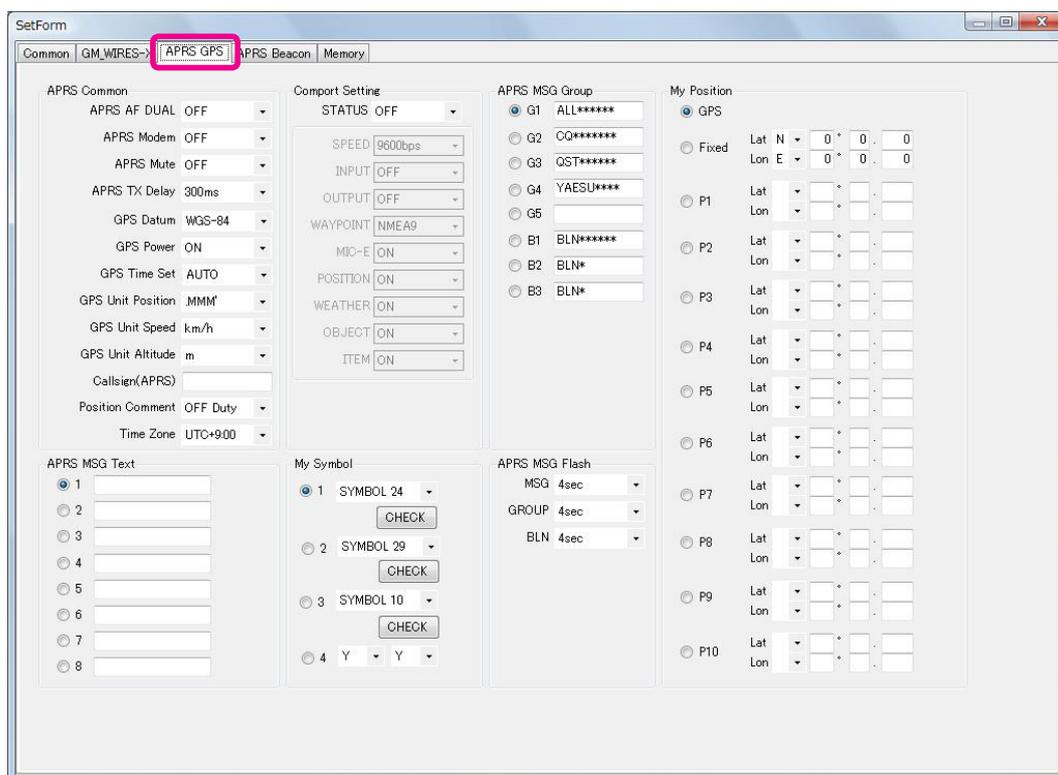


To change the setting of each item in the window, click the left mouse button on the "▼" icon to show the dropdown settings list, and then click the desired selection from the list. Enter the "Callsign(APRS)", "APRS MSG Text", "APRS MSG Group", and "My Position" information by placing the cursor in the appropriate box and typing the desired data.

Refer to the "FT1XDR/XDE/DR/DE Operating Manual" for the details of each function.

APRS Beacon


The settings related to the APRS and beacon functions of the FT1XDR/XDE/DR/DE may be configured with the programming software.

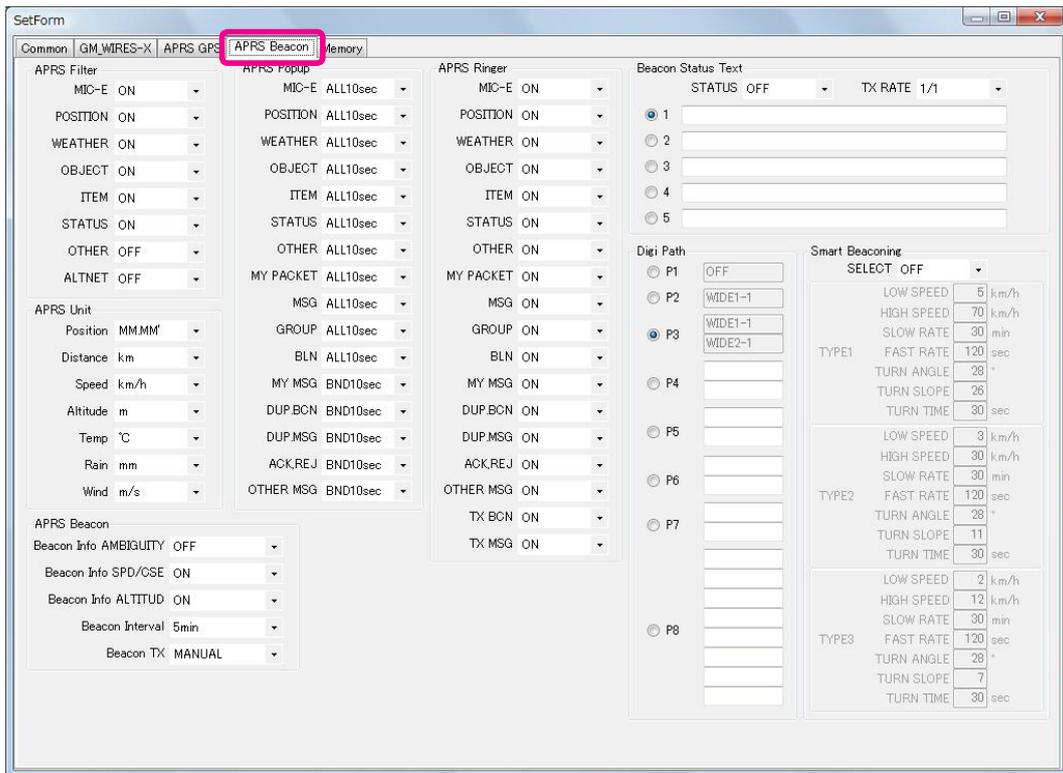

To change the setting of each item in the window, click the left mouse button on the "▼" icon to show the dropdown settings list, and then click the desired selection from the list. Enter the "Beacon Status Text" and "Digi Path" by placing the cursor in the appropriate box and typing the desired data. Refer to the "FT1XDR/XDE/DR/DE Operating Manual" for the details of each function.

Memory

The settings related to the memory and memory bank functions of the FT1XDR/XDE/DR/DE may be configured with the programming software.

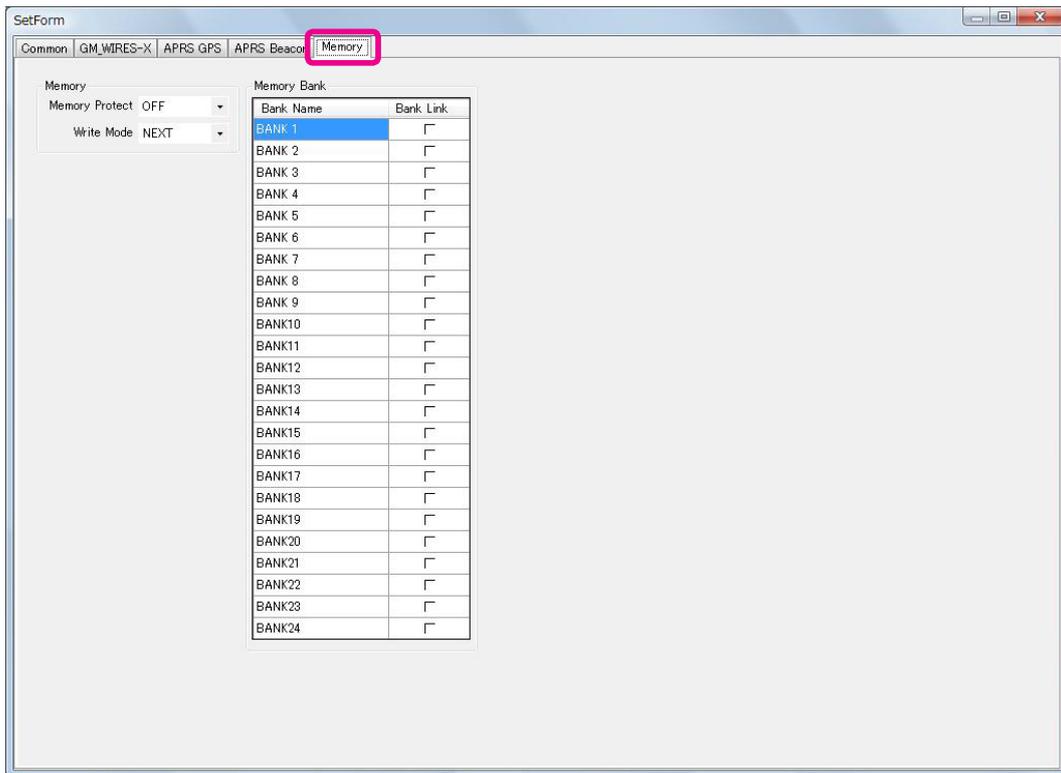

Refer to the "FT1XDR/XDE/DR/DE Operating Manual" for the details of each function.

When you have completed editing the settings of the Menu Setting window, click the left mouse button on the "X" icon at the upper right corner of the window. A confirmation window will open, click the left mouse button on the [OK] button to save the settings and close the window.


Tool Bar

Click the left mouse button on the "Toolbar" parameter in the "Setting" menu to display or hide the Toolbar. The toolbar includes buttons for some of the most often used commands in the ADMS-6 programmer. A check mark appears next to the "Toolbar" parameter when the Toolbar is displayed.



Status Bar

Click the left mouse button on the "Status Bar" parameter in the "Setting" menu to display or hide the Status Bar. The "Status Bar" describes the action to be executed by the selected menu item, or the depressed toolbar button, and keyboard latch state. A check mark appears next to the "Status Bar" parameter when the Status Bar is displayed.

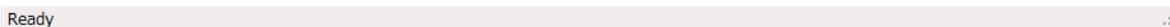


Window

This menu sets the operating window parameters of the ADMS-6 programmer.

Tile(up and down)

Click the left mouse button on the “Tile (up and down)” parameter in the “Window” menu to display multiple template files by dividing the window into two lists (upper and lower parts).

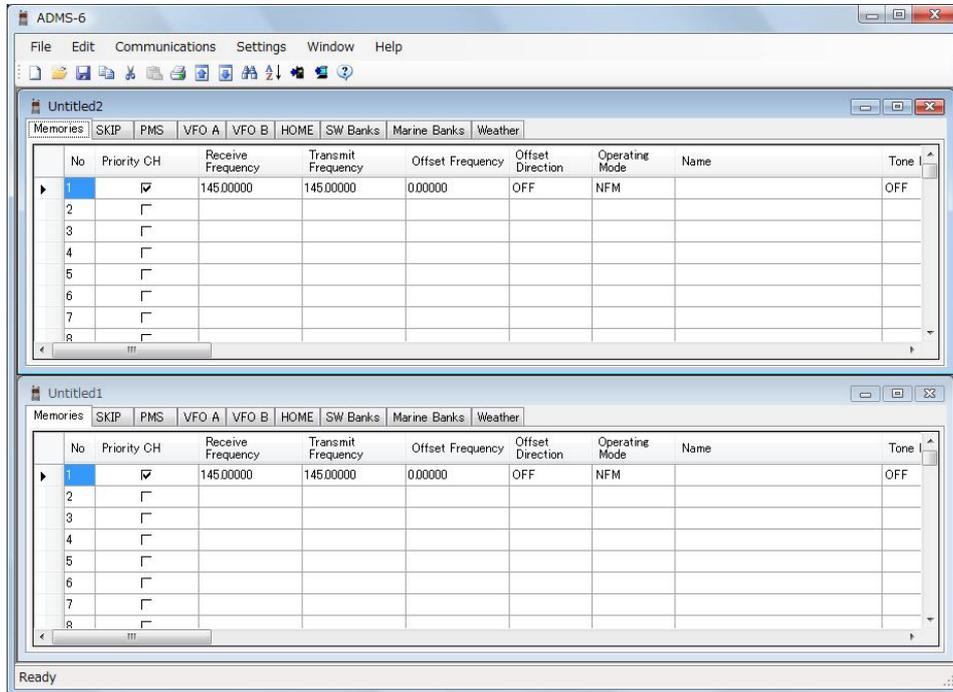


Tile(right and left)

Click the left mouse button on the “Tile (right and left)” parameter in the “Window” menu to display multiple template files by dividing the window into two lists (right and left parts).

Cascade

Click the left mouse button on the "Cascade" parameter in the "Window" menu to display multiple templates in cascade format.

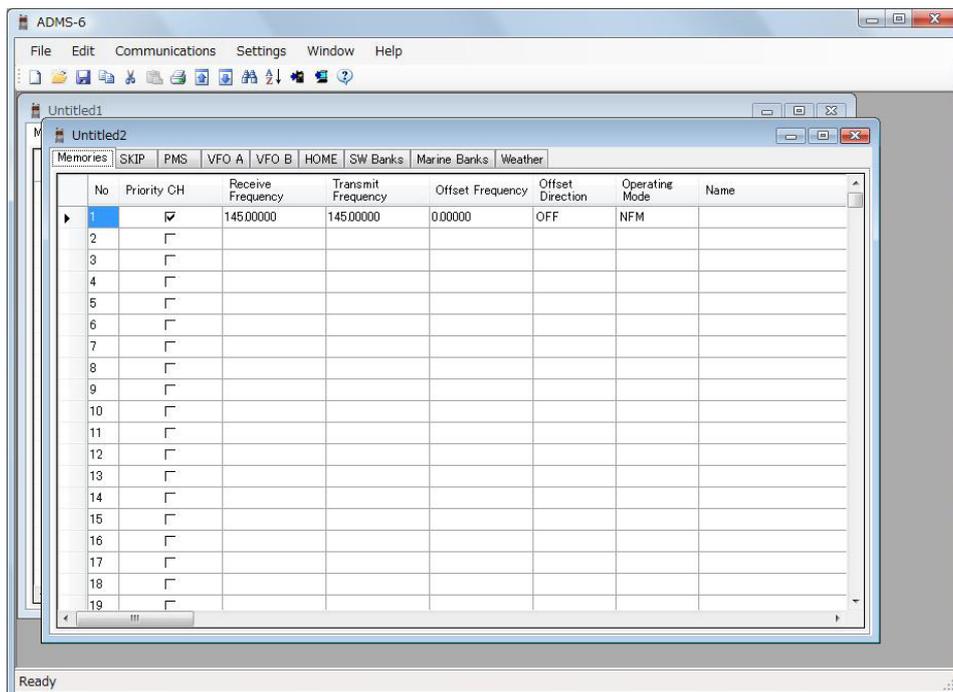


Setting the Template Items

Memories

Enter and edit the frequencies you normally use to the memory channels. Up to 900 channels can be registered.

Descriptions for each channel item (column) are as follows:

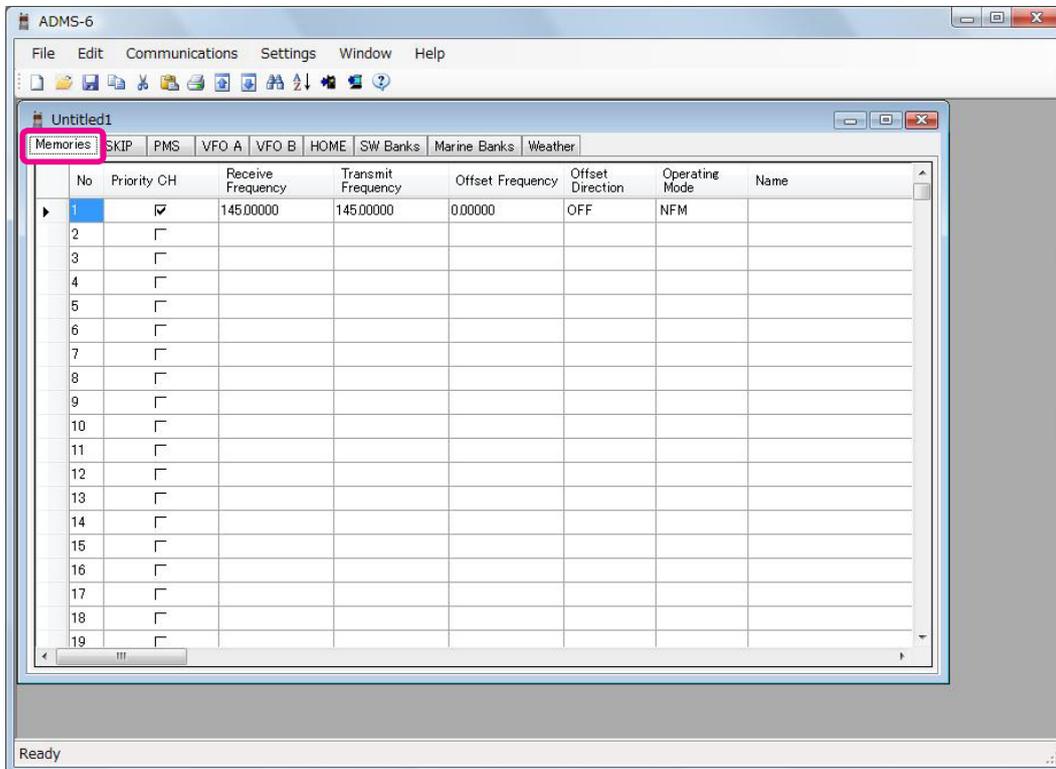

Descriptions for each item are as follows.

Priority CH

While Dual Watch is functioning, this channel is designated as the priority channel to be monitored before other channels. Only one normal memory channel can be set as Priority CH. Tick the check-box of the desired channel.

Receive Frequency / Transmit Frequency

Enter the RX / TX frequency.

Enter the desired receive/transmit frequency. When the frequency entry is complete, use the → key to move the cursor to the right and subsequently configure the additional detail settings for the channel. The receive and transmit frequencies can be set separately.

To enter the transmit frequency for the next channel, press the ENTER or ↓ key. The cursor will move to the next channel.

Offset Frequency

When a transmit frequency is not entered, transmission will be performed at a frequency obtained by adding/subtracting the offset frequency to/from the receive frequency.

Offset Direction

Set the frequency shift direction.

- -RPT
The transmit frequency is shifted to the minus offset.

- +RPT
The transmit frequency is shifted to the plus offset.
- -/+
The transmit frequency is not shifted.

Operating MODE

Select the operating mode for receive channel.

When entering a receive frequency, this item is automatically set to the operating mode that is most suitable for the frequency. The setting may also be changed as needed.

The AM and FM broadcast band frequency ranges are automatically set by default and are not changeable.

- FM
Use for normal bandwidth ham radio and advisory radio.
- AM
Use this mode for receiving the Air band radio, etc.
- NFM
Use the narrow bandwidth for ham radio and advisory radio.
- WFM
Use for FM broadcasting.

Name

Enter the desired memory name (up to 16 digits).

Tone Mode

This item selects the Audio Squelch Code type.

CTCSS Frequency

This item selects the Tone Frequency of the Tone Squelch.

DCS Code

Select the DCS code when DCS is set.

DCS Polarity

Change the phase inversion of the DCS code for receive/transmit. When communication using the DCS code cannot be achieved, changing the phase inversion might enable the DCS code communication.

User CTCSS

Select the idle line frequency to remove signals such as idle line signals used by private railways and control signals of MCA radio system.

TX Power

This item selects the TX Power.

Skip

Select the scanning condition for receiving channels.

- OFF
Performs scanning according to the set mode basic setting –SCAN RESUME.
- SKIP
Skips the designated memory channels during scanning.

- **SELECT**

Starts scanning from a designated channel and scans only designated channels.

Step

Sets the channel step for receiving channels. Normally, when a frequency is entered, the optimal channel step will be automatically set according to the frequency.

Memory Mask

When the checkbox of this item is ticked, the corresponding memory channel cannot be called for a period of time. Un-ticking the checkbox enables calling the memory channel.

ATT

By ticking the checkbox of this item, the receive sensitivity is lowered by about 10dB. This is useful when, for example, an adjacent strong radio wave interferes with the reception.

S-Meter SQL

Configure the normal noise squelch setting, and also the S-meter squelch level setting.

- **OFF**

Disables S-Meter SQL.

- **Level 1 to Level 9**

Select the S-Meter SQL level.

Bell

Outputs a ringing tone when receiving a signal that satisfies the conditions set from the squelch type. Set the number of times the tone (bell) rings.

Vibrator

Enables vibration when receiving a signal that satisfies the conditions set from the squelch type.

Half DEV

Lowers the transmit deviation to approximately half.

Clock Shift

When an internal spurious signal occurs due to the microcomputer clock, turn this setting on (tick the checkbox). This may improve the situation.

Usually, this item is set to "OFF" (un-tick the checkbox).

BANK 1 to BANK 24

A combination of up to 100 memory channels and preset memory channels can be registered to each of BANK 1 to BANK 24. In the column of each channel, tick the checkbox of the BANK to register the desired channel.

When recalling a bank, only channels registered to the bank will be recalled.


Comment

Comments may be added to the registered memory channels. Up to 255 letters can be used. This function is useful in organizing the memory channels by, for example, applying a category name to each channel.

These comments are not transferred to the FT1XDR/XDE/DR/DE.

SKIP


When scanning the VFO, if there are frequencies with continuous signals, scanning may be interrupted. To skip these channels, click the skip channel designation. Up to 99 channels can be registered.

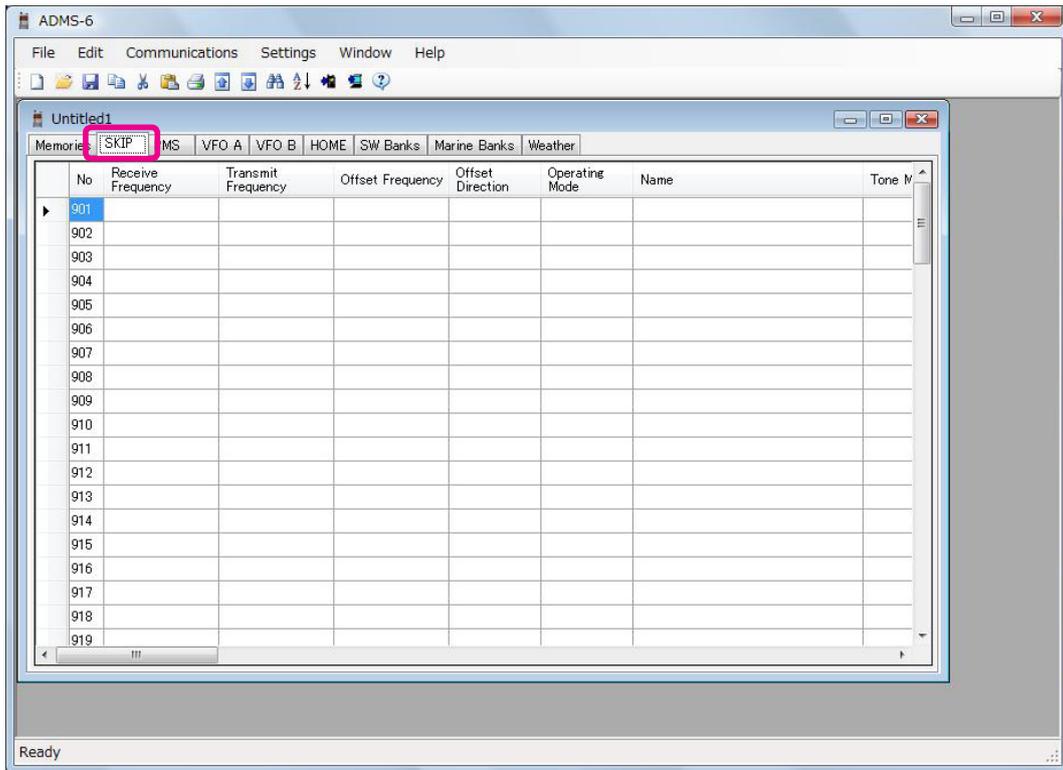

For details and descriptions of each item, see “Memories” (Page 23).

PMS


Edit the upper and lower limit frequencies for performing PMS (Programmable Memory Scan). Enter the lower limit frequency for the L channel and the upper limit frequency for the corresponding U channel. Up to 50 pairs (100 channels) of PMS can be registered.

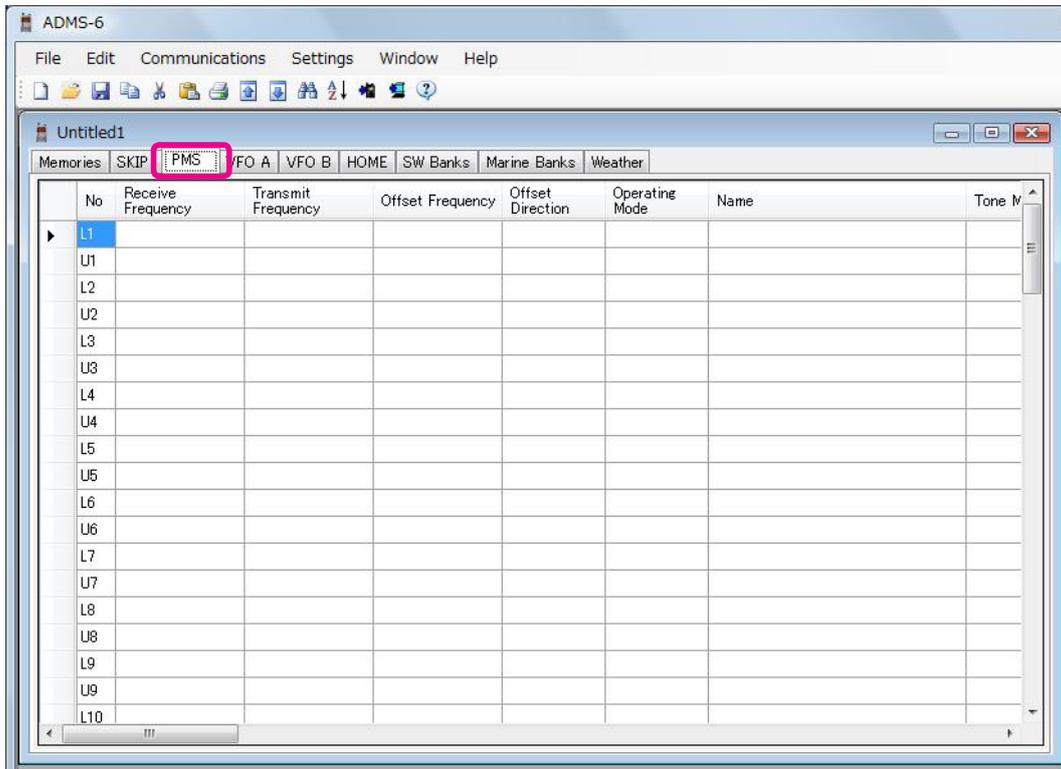


For details and descriptions of each item, see “Memories” (Page 23).

VFO A / VFO B

Click the “VFO A” tab to edit the VFO of the A band.

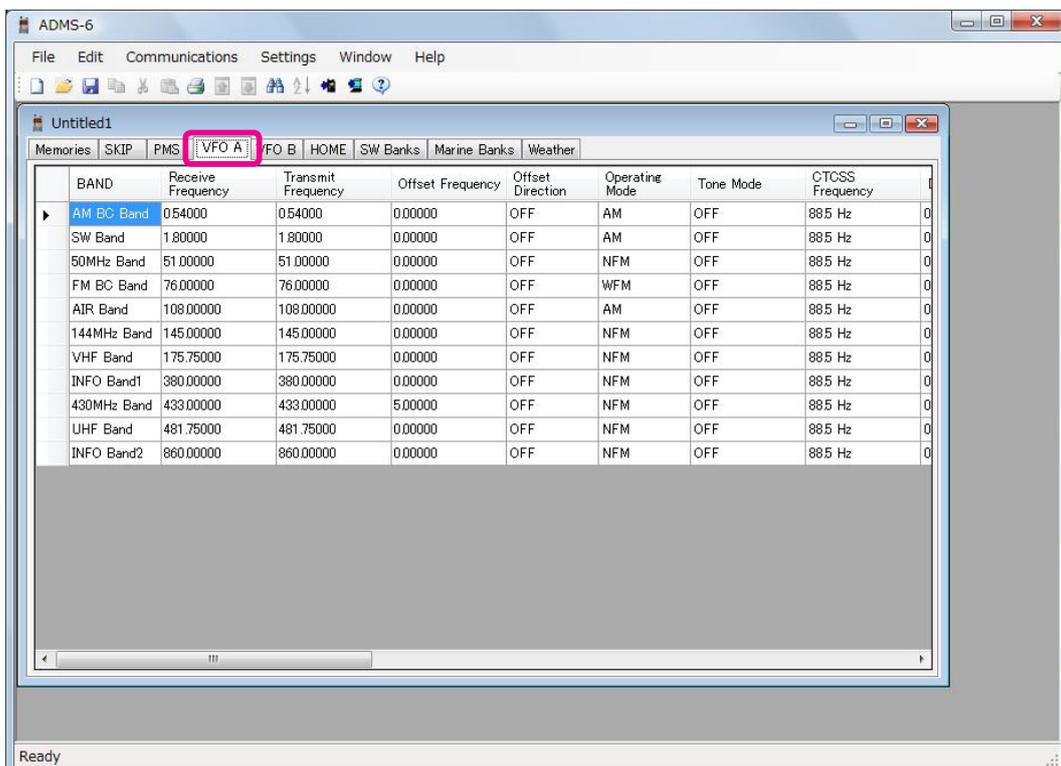

Click the “VFO B” tab to edit the VFO of the B band.

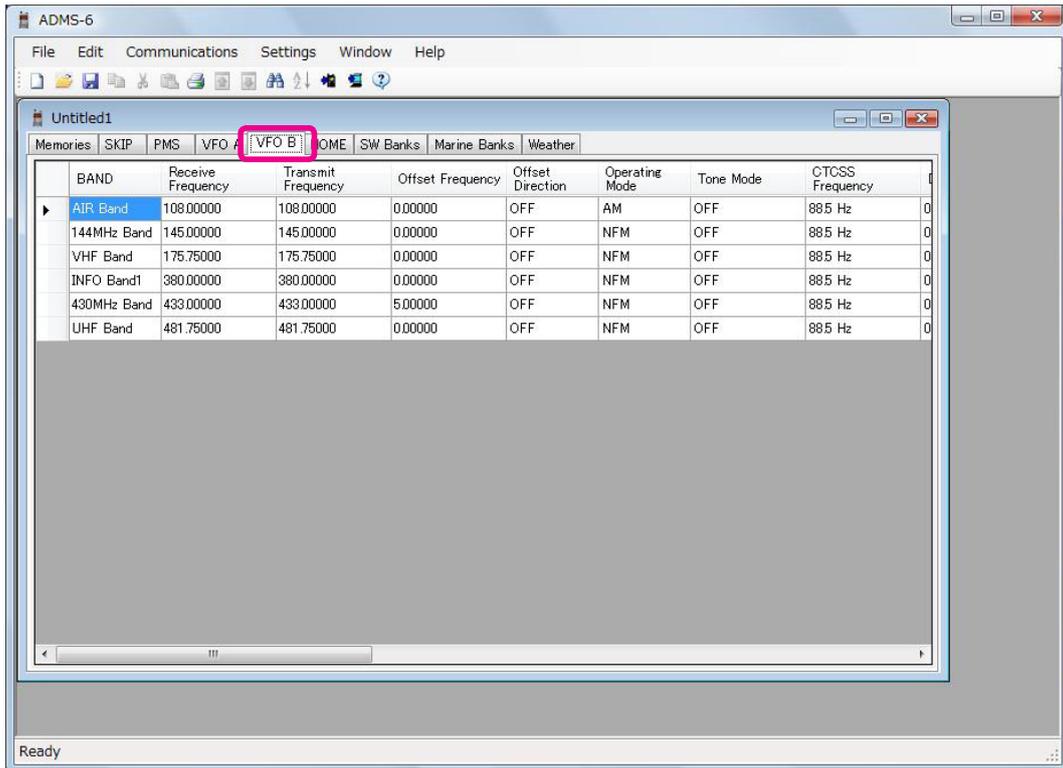


Descriptions for each item are as follows. Items other than the following are the same as those of “Memories”. See “Memories” (Page 23).

Receive Frequency

Enter the Band A VFO frequencies (upper section) and Band B VFO frequencies (lower section) for each band. The FT1XDR/XDE/DR/DE, Band A and Band B VFO default frequencies are set in the standard templates of the ADMS-6 programmer.

A frequency that is out of the transceiver’s range cannot be entered. When the error pop-up window is opened, enter the correct frequency.

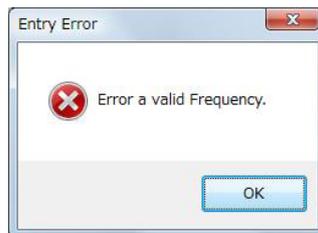

Transmit Frequency

When the shift direction is set to -/+, the transmit frequency can be set as desired. In other cases, the transmit frequency display is grayed out, and it will be set automatically, in accordance with the receive, and the offset frequencies.

Operating MODE

Select the operating mode for the receive channels:

When entering a receive frequency, this item automatically selects the operating mode that is most suitable for the frequency.

The AM and FM broadcast radio frequency ranges are automatically set by default and are not changeable.

- FM
Use for normal bandwidth ham radio and advisory radio.
- AM
Use this mode for receiving the Air band radio, etc.
- NFM
Use for narrow bandwidth for ham radio and advisory radio.
- WFM
Use for FM broadcasting.

Tone Mode

This item selects the Audio Squelch type.

* For FM/AM radio bands, the squelch type options will be grayed out and are not selectable.

Comment


Comments may be added to the edited VFO channels. Up to 255 letters can be used.

This function is useful in organizing the VFO channels by, for example, applying a category name to each channel.

These comments are not transferred to the FT1XDR/XDE/DR/DE.

HOME

Edit the Home Channel configurations:

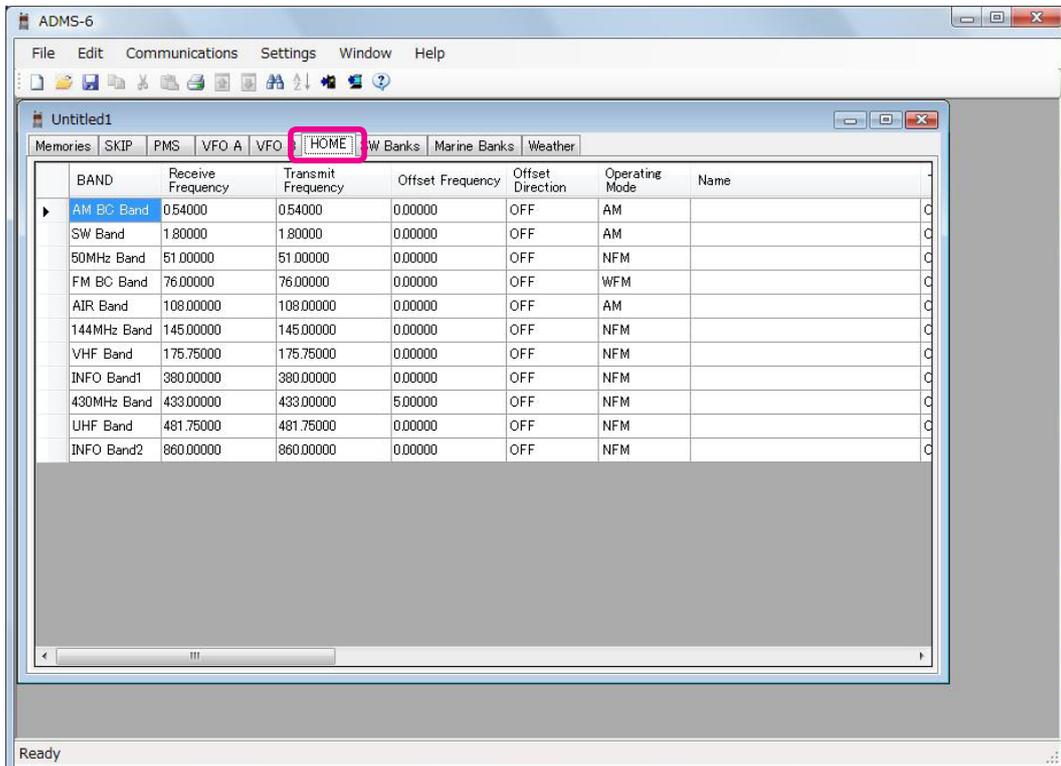


Descriptions for each item are as follows. Items other than the following are the same as those of “Memories”. See “Memories” (Page 23).

Receive Frequency / Transmit Frequency

Enter any desired changes into Home Channel frequency. The FT1XDR/XDE/DR/DE default Frequencies are pre-entered into the ADMS-6 standard template.

A frequency that is out of transceiver’s range cannot be entered. When the error pop-up window is opened, enter the correct frequency.

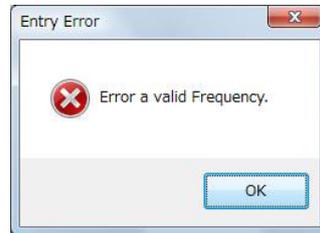

Operating MODE

Select the operating mode for the receive channels:

When entering a receive frequency, this item automatically selects the operating mode that is most suitable for the frequency.

The AM and FM broadcast radio frequency ranges are automatically set by default and are not changeable.

- FM
Use for normal bandwidth ham radio and advisory radio.
- AM
Use this mode for receiving the Air band radio, etc.
- NFM
Use for narrow bandwidth ham radio and advisory radio.
- WFM
Use for FM broadcasting.

Comment


Comments may be added to the edited HOME channels. Up to 255 letters can be used.

This function is useful in organizing the HOME channels by, for example, applying a category name to each channel.

These comments are not transferred to the FT1XDR/XDE/DR/DE.

SW Banks

Edit shortwave broadcasting channels:

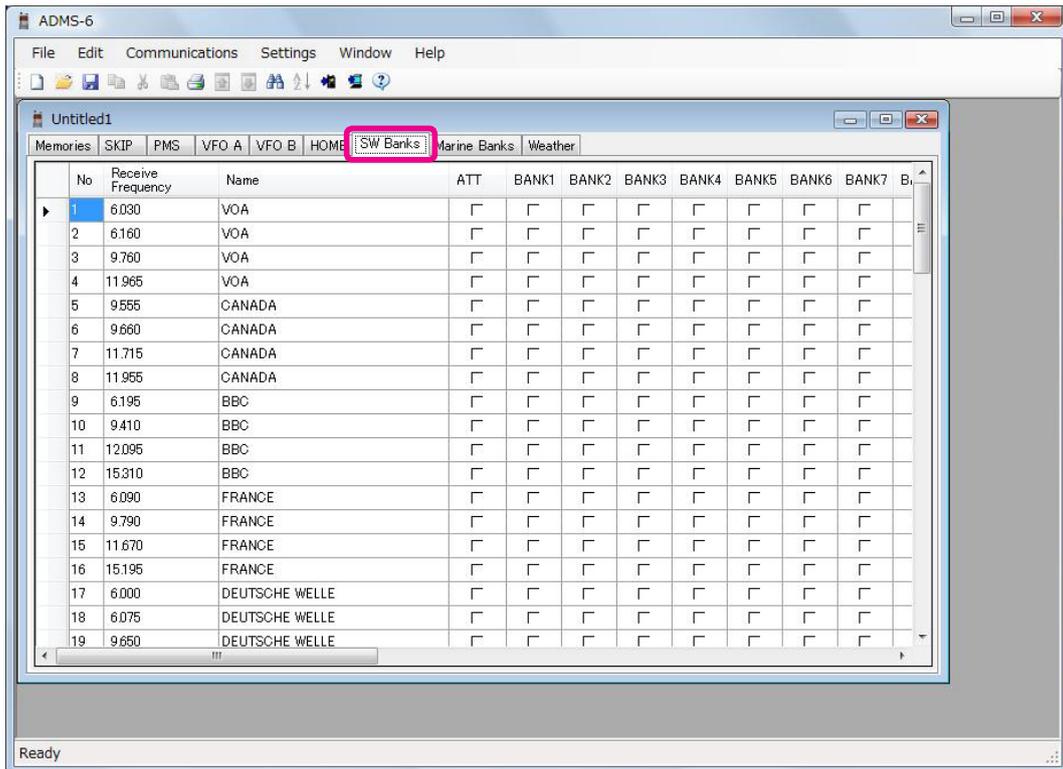

Descriptions for each item are as follows. The “ATT” function is same as that of “Memories”. See “Memories” (Page 23).

BANK 1 to BANK 24

Up to 100 shortwave broadcasting channels can be registered to each of BANK 1 to BANK 24. In the column of each channel, tick the checkbox of the BANK to register the desired channel.


Comment

Comments may be added to the shortwave broadcasting channels. Up to 255 letters can be used. This function is useful in organizing the shortwave broadcasting channels by, for example, applying a category name to each channel. These comments are not transferred to the FT1XDR/XDE/DR/DE.

Other editing operations such as frequency editing cannot be performed.

Marine Banks

Edit 57 international VHF (marine band) channels in total:

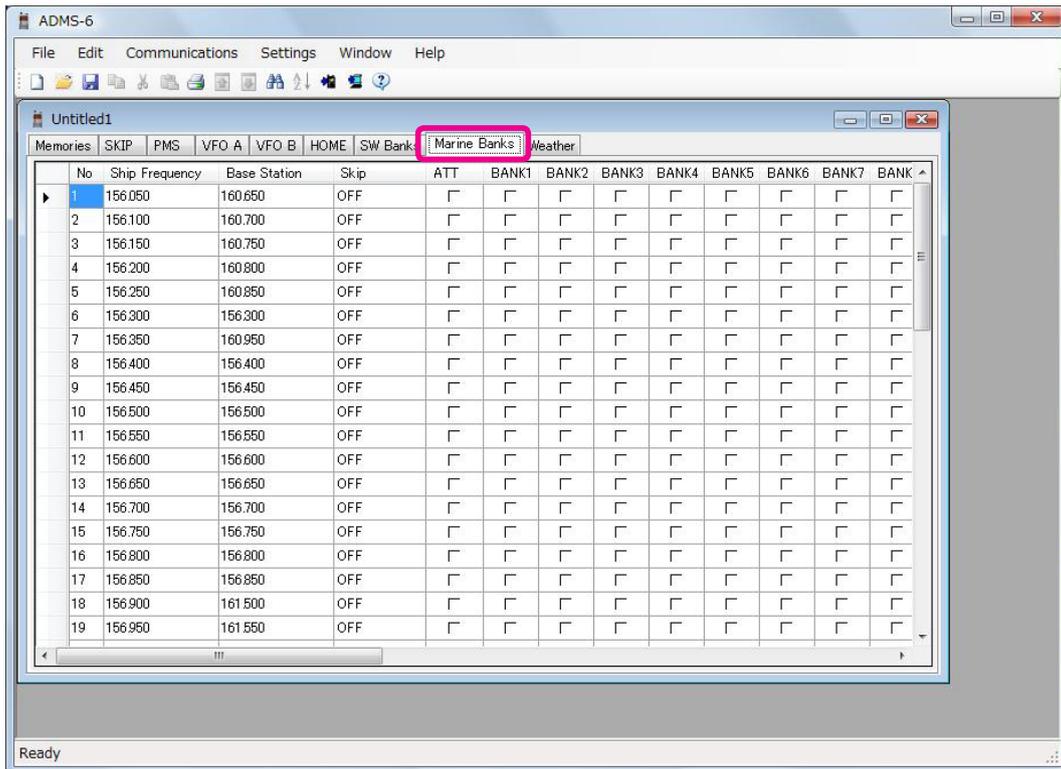

Descriptions for each item are as follows. The “Skip” and “ATT” functions are same as those of “Memories”. See “Memories” (Page 23).

BANK 1 to BANK 24

Up to 100 international VHF channels may be registered to each of BANK 1 to BANK 24. In the column of each channel, tick the checkbox of the BANK to register the desired channel.

Comment

Comments may be added to the international VHF channels. Up to 255 letters can be used.


This function is useful in organizing the international VHF channels by, for example, applying a category name to each channel.

These comments are not transferred to the FT1XDR/XDE/DR/DE.

Other editing operations such as frequency editing cannot be performed.

Weather

Edit 10 VHF Weather Broadcast Station channels in total.

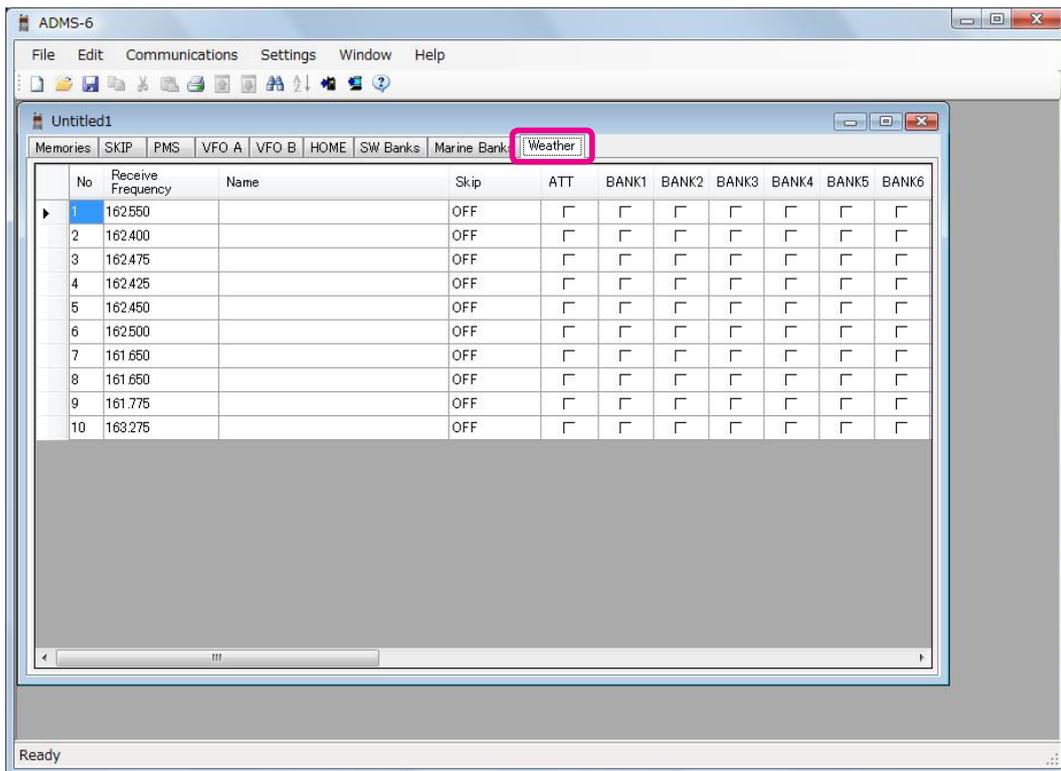

Descriptions for each item are as follows. The “Name”, “Skip” and “ATT” functions are the same as those of “Memories”. See “Memories” (Page 23).

BANK 1 to BANK 24

Up to 100 VHF Weather Broadcast Station channels can be registered to each of BANK 1 to BANK 24. In the column of each channel, tick the checkbox of the BANK to register the desired channel.

Comment

Comments may be added to the VHF Weather Broadcast Station channels. Up to 255 letters can be used.

These comments are not transferred to the FT1XDR/XDE/DR/DE.

Other editing operations such as frequency editing cannot be performed.

Troubleshooting

The FT1XDR/XDE/DR/DE cannot receive or transmit data to the computer.

The Data transfer does not start.

- Verify that the programming cable is correctly connected to the FT1XDR/XDE/DR/DE data port and to the Computer.
- The battery of the FT1XDR/XDE/DR/DE may be depleted.
Charge the battery or replace the battery with the new one.
- Is the computer COM Port setting correct?
Set the COM Port correctly.

The data transmission has stopped before completion.

- Disconnecting the connection cable or poor contact of the connection cable.
Confirm the cable connection and try again.
- The battery of the FT1XDR/XDE/DR/DE may be depleted.
Charge the battery or replace the battery with the new one.

The data import/export is not successful.

- Adjust the number of the rows of CSV file.
- Use the designated letter for the character string
- When importing and exporting channels such as memory channels and VFO channels, make sure that the template files are consistent. If the template files are different, an error will occur and the data import and export will not be successful.

Contact YAESU Technical Support

For the latest information about YAESU products visit <http://www.yaesu.com>

For Technical Support or Customer Service call, (714)827-7600 between 8AM – 5PM PST



Copyright 2017
YAESU MUSEN CO., LTD.
All rights reserved.

No portion of this manual may be
reproduced without the permission of
YAESU MUSEN CO., LTD.

YAESU MUSEN CO., LTD.

Tennozu Parkside Building
2-5-8 Higashi-Shinagawa, Shinagawa-ku, Tokyo 140-0002 Japan

YAESU USA

6125 Phyllis Drive, Cypress, CA 90630, U.S.A.

YAESU UK

Unit 12, Sun Valley Business Park, Winnall Close
Winchester, Hampshire, SO23 0LB, U.K.